# Owner's Manual


# **CRAFTZMAN®**

# **ROTARY LAWN MOWER**

6.75 HorsepowerPower-Propelled21" Multi-Cut

Model No.

917.370733

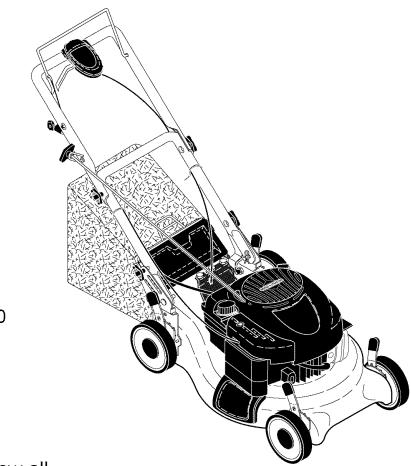

• Español, p. 20

**CAUTION:** 

Read and follow all Safety Rules and Instructions before operating this equipment

Sears, Roebuck and Co., Hoffman Estates, IL 60179 U.S.A. Visit our Craftsman website: www.sears.com/craftsman

# TABLE OF CONTENTSWarranty2Maintenance13-16Safety Rules2-4Service and Adjustments16-17Product Specifications4Storage17-18Assembly / Pre-Operation6-7Troubleshooting18-19Operation8-12Repair Parts38-45Maintenance Schedule13Sears ServiceBack Cover

# **WARRANTY**

# 2-YEAR FULL WARRANTY ON CRAFTSMAN LAWN MOWER

If this Craftsman Lawn Mower fails due to manufacturer defects in material or workmanship within two years from the date of purchase, return it to any Sears store, Parts & Repair Center or other Craftsman outlet for free repair (or replacement if repair proves impossible).

This warranty applies for only 90 days from the date of purchase if this Lawn Mower is ever used for commercial or rental purposes.

This warranty does not cover:

- Expendable items that become worn during normal use, such as rotary mower blades, blade adapters, belts, air cleaners and spark plug.
- Repairs necessary because of operator abuse or negligence, including bent crackshafts and the failure to assemble, operate or maintain this Lawn Mower according to all supplied product instructions.

This warranty applies only while this product is used in the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears, Roebuck and Co., Hoffman Estates, IL 60179

# **SAFETY RULES**

**IMPORTANT:** This cutting machine is capable of amputating hands and feet and throwing objects. Failure to observe the following safety instructions could result in serious injury or death.

ALook for this symbol to point out important safety precautions. It means CAUTION!!! BECOME ALERT!!! YOUR SAFETY IS INVOLVED.

▲ WARNING: In order to prevent accidental starting when setting up, transporting, adjusting or making repairs, always disconnect spark plug wire and place wire where it cannot come in contact with plug.

**AWARNING:** Engine exhaust, some of its constituents, and certain vehicle components contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

**AWARNING:** Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. **Wash hands after handling.** 

▲ CAUTION: Muffler and other engine parts become extremely hot during operation and remain hot after engine has stopped. To avoid severe burns on contact, stay away from these areas.



# I. GENERAL OPERATION

- Read, understand, and follow all instructions on the machine and in the manual(s) before starting. Be thoroughly familiar with the controls and the proper use of the machine before starting.
- Do not put hands or feet near or under rotating parts. Keep clear of the discharge opening at all times.
- Only allow responsible individuals, who are familiar with the instructions, to operate the machine.
- Clear the area of objects such as rocks, toys, wire, bones, sticks, etc., which could be picked up and thrown by blade.
- Be sure the area is clear of other people before mowing. Stop machine if anyone enters the area.
- Do not operate the mower when barefoot or wearing open sandals. Always wear substantial foot wear.
- Do not pull mower backwards unless absolutely necessary. Always look down and behind before and while moving backwards.
- Never direct discharged material toward anyone. Avoid discharging material against a wall or obstruction. Material may richochet back toward the operator. Stop the blade when crossing gravel surfaces.
- Do not operate the mower without proper guards, plates, grass catcher or other safety protective devices in place.
- See manufacturer's instructions for proper operation and installation of accessories. Only use accessories approved by the manufacturer.
- Stop the blade(s) when crossing gravel drives, walks, or roads.
- Stop the engine (motor) whenever you leave the equipment, before cleaning the mower or unclogging the chute.
- Shut the engine (motor) off and wait until the blade comes to complete stop before removing grass catcher.
- Mow only in daylight or good artificial light.
- Do not operate the machine while under the influence of alcohol or drugs.
- Never operate machine in wet grass.
   Always be sure of your footing: keep a firm hold on the handle; walk, never run.
- Disengage the self-propelled mechanism or drive clutch on mowers so equipped before starting the engine.
- If the equipment should start to vibrate abnormally, stop the engine (motor) and check immediately for the cause. Vibration is generally a warning of trouble.

 Always wear safety goggles or safety glasses with side shields when operating mower.

# II. SLOPE OPERATION

Slopes are a major factor related to slip & fall accidents which can result in severe injury. All slopes require extra caution. If you feel uneasy on a slope, do not mow it.

# DO:

- Mow across the face of slopes: never up and down. Exercise extreme caution when changing direction on slopes.
- Remove obstacles such as rocks, tree limbs, etc.
- Watch for holes, ruts, or bumps. Tall grass can hide obstacles.

# DO NOT:

- Do not trim near drop-offs, ditches or embankments. The operator could lose footing or balance.
- Do not trim excessively steep slopes.
- Do not mow on wet grass. Reduced footing could cause slipping.

# III. CHILDREN

Tragic accidents can occur if the operator is not alert to the presence of children. Children are often attracted to the machine and the mowing activity. *Never* assume that children will remain where you last saw them.

- Keep children out of the trimming area and under the watchful care of another responsible adult.
- Be alert and turn machine off if children enter the area.
- Before and while walking backwards, look behind and down for small children.
- Never allow children to operate the machine.
- Use extra care when approaching blind corners, shrubs, trees, or other objects that may obscure vision.

# IV. SAFE HANDLING OF GASOLINE

Use extreme care in handling gasoline. Gasoline is extremely flammable and the vapors are explosive.

- Extinguish all cigarettes, cigars, pipes and other sources of ignition.
- Use only an approved container.
- Never remove gas cap or add fuel with the engine running. Allow engine to cool before refueling.
- · Never refuel the machine indoors.
- Never store the machine or fuel container where there is an open flame, spark or pilot light such as a water heater or on other appliances.

- Never fill containers inside a vehicle, on a truck or trailer bed with a plastic liner.
   Always place containers on the ground away from your vehicle before filling.
- Remove gas-powered equipment from the truck or trailer and refuel it on the ground. If this is not possible, then refuel such equipment with a portable container, rather than from a gasoline dispenser nozzle.
- Keep the nozzle in contact with the rim of the fuel tank or container opening at all times until fueling is complete. Do not use a nozzle lock-open device.
- If fuel is spilled on clothing, change clothing immediately.
- Never overfill fuel tank. Replace gas cap and tighten securely.

# V. GENERAL SERVICE

- Never run a machine inside a closed area
- Never make adjustments or repairs with the engine (motor) running. Disconnect the spark plug wire, and keep the wire away from the plug to prevent accidental starting.

- Keep nuts and bolts, especially blade attachment bolts, tight and keep equipment in good condition.
- Never tamper with safety devices. Check their proper operation regularly.
- Keep machine free of grass, leaves, or other debris build-up. Clean oil or fuel spillage. Allow machine to cool before storing.
- Stop and inspect the equipment if you strike an object. Repair, if necessary, before restarting.
- Never attempt to make wheel height adjustments while the engine is running.
- Grass catcher components are subject to wear, damage, and deterioration, which could expose moving parts or allow objects to be thrown. Frequently check components and replace with manufacturer's recommended parts, when necessary.
- Mower blades are sharp and can cut.
   Wrap the blade(s) or wear gloves, and use extra caution when servicing them.
- Do not change the engine governor setting or overspeed the engine.
- Maintain or replace safety and instruction labels, as necessary.

**AWARNING:** This lawn mower is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws (if any). If a spark arrester is used, it should be maintained in effective working order by the operator. In the state of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. A spark arrester for the muffler is available through your nearest Sears

Parts & Repair Center (See the REPAIR PARTS section of this manual).

PRODUCT SPECIFICATIONS

Serial Number:

Date of Purchase:

Gasoline Capacity / Type: 1.6 Quarts (Unleaded Regular)

Oil Type (API SG-SL): SAE 30 (above 32°F); SAE 5W-30 (below 32°F)

Oil Capacity: 20 Ounces

Spark Plug (Gap: .030") Champion RJ19HX

Blade Bolt Torque: 35-40 ft. lbs.

# **Repair Protection Agreements**

Congratulations on making a smart purchase. Your new Craftsman® product is designed and manufactured for years of dependable operation. But like all products, it may require repair from time to time. That's when having a Repair Protection Agreement can save you money and aggravation.

Purchase a Repair Protection Agreement now and protect yourself from unexpected hassle and expense.

Here's what's included in the Agreement:

- Expert service by our 12,000 profesional repair specialists.
- Unlimited service and no charge for parts and labor on all covered repairs.
- Product replacement if your covered product can't be fixed.
- Discount of 10% from regular price of service and service-related parts not covered by the agreement; also, 10% off regular price of preventive maintenance check.

 Fast help by phone – phone support from a Sears representative on products requiring in-home repair, plus convenient repair scheduling.

Once you purchase the Agreement, a simple phone call is all that it takes for you to schedule service. You can call anytime day or night, or schedule a service appointment online.

Sears has over 12,000 professional repair specialists, who have access to over 4.5 million quality parts and accessories. That's the kind of professionalism you can count on to help prolong the life of your new purchase for years to come. Purchase your Repair Protection Agreement today! Some limitations and exclusions apply. For prices and additional information call 1-800-827-6655.


# **Sears Installation Service**

For Sears professional installation of home appliances, garage door openers, water heaters, and other major home items, in the U.S.A. call **1-800-4-MY-HOME**®.


# **ACCESSORIES**

These accessories were available when this lawn mower was produced. **They are not shipped with your mower.** They are also available at most Sears retail outlets and service centers. Some of these accessories may not apply to your lawn mower.

# LAWN MOWER PERFORMANCE

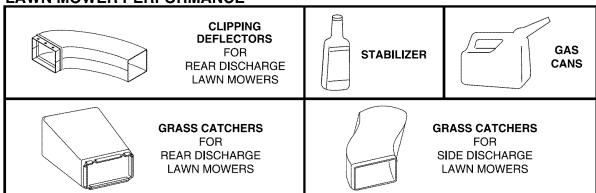

# LAWN MOWER MAINTENANCE

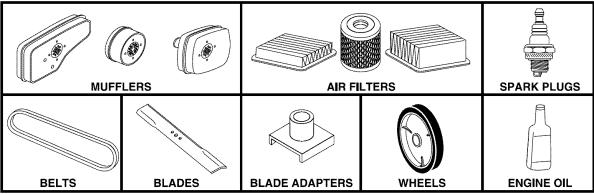

# **ASSEMBLY / PRE-OPERATION**

Read these instructions and this manual in its entirety before you attempt to assemble or operate your new lawn mower.

**IMPORTANT**: This lawn mower is shipped WITHOUT OIL OR GASOLINE in the engine.

Your new lawn mower has been assembled at the factory with the exception of those parts left unassembled for shipping purposes. All parts such as nuts, washers, bolts, etc., necessary to complete the assembly have been placed in the parts bag. To ensure safe and proper operation of your lawn mower, all parts and hardware you assemble must be tightened securely. Use the correct tools as necessary to ensure proper tightness.

# TO REMOVE LAWN MOWER FROM CARTON


- 1. Remove loose parts included with mower.
- 2. Cut down two end corners of carton and lay end panel down flat.
- Remove all packing materials except padding between upper and lower handle and padding holding operator presence control bar to upper handle.
- Roll lawn mower out of carton and check carton thoroughly for additional loose parts.


# HOW TO SET UP YOUR MOWER TO UNFOLD HANDLE

**IMPORTANT**: Unfold handle carefully so as not to pinch or damage control cables.

- 1. Raise lower handle section to operating position and align hole in handle with one of three height positioning holes.
- 2. Insert handle bolt through handle and bracket and secure with knob.
- 3. Repeat for opposite side of handle.
- Remove protective padding, raise upper handle section into place on lower handle and tighten both handle knobs.
- 5. Remove any packing material from around control bar.


Your lawn mower handle can be adjusted for your mowing comfort. Refer to "AD-JUST HANDLE" in the Service and Adjustments section of this manual.

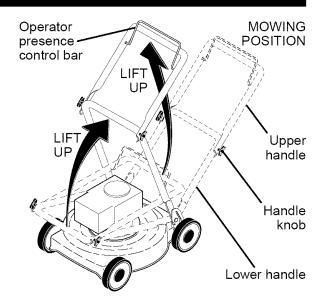

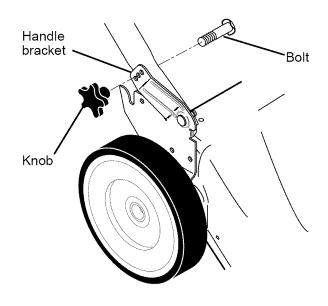

# TO ASSEMBLE GRASS CATCHER

- Put grass catcher frame into grass bag with rigid part of bag on the bottom.
   Make sure the frame handle is outside of the bag top.
- 2. Slip vinyl bindings over frame. **NOTE**: If vinyl bindings are too stiff, hold them in warm water for a few minutes. If bag gets wet, let it dry before using.

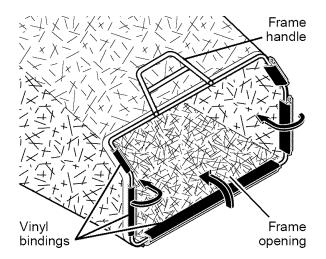

# TO INSTALL ATTACHMENTS

Your lawn mower was shipped ready to be used as a mulcher. To convert mower to bagging or discharging, see "TO CON-VERT MOWER" in the Operation section of this manual.

# TO PREPARE BATTERY

**NOTE:** Your battery must be charged before you can start your lawn mower.


- Connect battery charger connector (male) to harness connector (female).
- Plug battery charger into 110 volt A.C. outlet.
- Leave battery charger connected for 24 hours before starting your engine for the first time.
- 4. After charging, disconnect harness connector (female) from battery charger connector (male).

Connect your battery charger to charge battery after each use.

**IMPORTANT:** The engine will not recharge your battery.

At the end of the mowing season the battery should be charged for 48 hours to protect the battery during winter storage.

**ACAUTION:** Always disconnect the engine connector (male) from the battery connector (female) to prevent accidental starting when transporting or storing your lawn mower after the season.

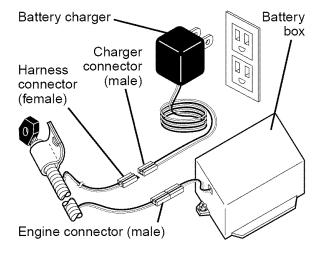

# **OPERATION**

# **KNOW YOUR LAWN MOWER**

READ THIS OWNER'S MANUAL AND ALL SAFETY RULES BEFORE OPERATING YOUR LAWN MOWER. Compare the illustrations with your lawn mower to familiarize yourself with the location of various controls and adjustments. Save this manual for future reference.

These symbols may appear on your lawn mower or in literature supplied with the product. Learn and understand their meaning.



















CAUTION OR WARNING

**ENGINE** 

**ENGINE** OFF


**FAST** 

SLOW

CHOKE

**FUEL** 

OIL DANGER, KEEP HANDS AND FEET AWAY

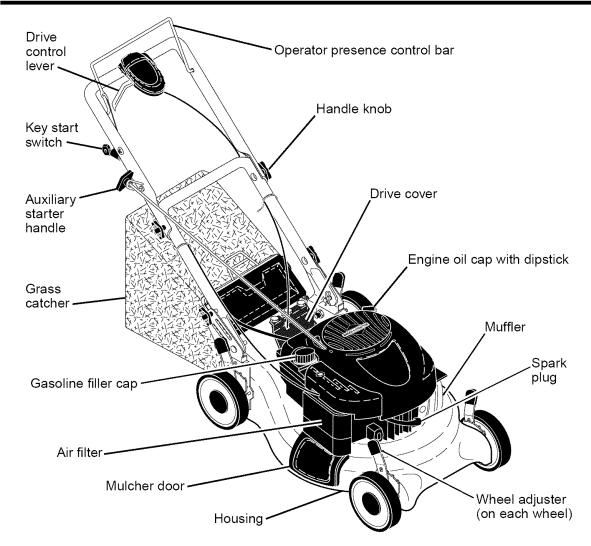

**IMPORTANT:** This lawn mower is shipped WITHOUT OIL OR GASOLINE in the engine.

# MEETS CPSC SAFETY REQUIREMENTS

Sears rotary walk-behind power lawn mowers conform to the safety standards of the American National Standards Institute and the U.S. Consumer Product Safety Commission. The blade turns when the engine is running.

Operator presence control bar - must be held down to the handle to start the engine. Release to stop the engine. Auxiliary starter handle - used for starting engine.

**Key start switch –** used for starting engine. Mulcher door – allows conversion to discharging or bagging operation. Drive control lever - used to engage 8 power-propelled forward motion of mower.



The operation of any lawn mower can result in foreign objects thrown into the eyes, which can result in severe eye dam-

age. Always wear safety glasses or eye shields while operating your lawn mower or performing any adjustments or repairs. We recommend a standard safety glasses or wide vision safety mask worn over spectacles.

# HOW TO USE YOUR LAWN MOWER ENGINE SPEED

The engine speed was set at the factory for optimum performance. Speed is not adjustable.

# **ENGINE ZONE CONTROL**


**ACAUTION:** Federal regulations require an engine control to be installed on this lawn mower in order to minimize the risk of blade contact injury. Do not under any circumstances attempt to defeat the function of the operator control. The blade turns when the engine is running.

 Your lawn mower is equipped with an operator presence control bar which requires the operator to be positioned behind the lawn mower handle to start and operate the lawn mower.

# **DRIVE CONTROL**

- Self-propelling is controlled by holding the operator presence control bar down to the handle and pulling the drive control lever rearward to the handle. The farther toward the handle the lever is pulled, the faster the unit will travel.
- Forward motion will stop when either the operator presence control bar or drive control lever are released. To stop forward motion without stopping engine, release the drive control lever only. Hold operator presence control bar down against handle to continue mowing without self-propelling.

**NOTE:** If after releasing the drive control the mower will not roll backwards, push the mower forward slightly to disengage drive wheels.

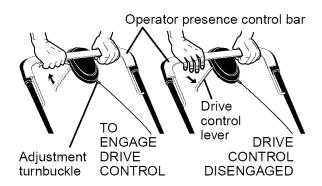

## DRIVE CONTROL ADJUSTMENT

Over time, the drive control system may become "loose", resulting in decreased speed. There is a turnbuckle on the drive control housing to increase tension on the drive cable. Proceed as follows:


- 1. Turn unit off and disconnect spark plug wire from spark plug.
- 2. Rotate turnbuckle on drive control to increase drive speed.
- 3. Operate mower to test drive speed. Readjust as required.
- 4. If condition fails to improve after the above steps (forward speed remains the same), your drive belt is worn and should be replaced.

# TO ADJUST CUTTING HEIGHT

Raise wheels for low cut and lower wheels for high cut, adjust cutting height to suit your requirements. Medium position is best for most lawns.

To change cutting height, squeeze adjuster lever toward wheel. Move wheel up or down to suit your requirements. Be sure all wheels are in the same setting.

**NOTE:** Adjuster is properly positioned when plate tab inserts into hole in lever. Also, 9-position adjusters (if so equipped) allow lever to be positioned between the plate tabs.

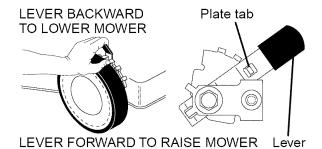


# TO CONVERT MOWER

Your lawn mower was shipped ready to be used as a mulcher. To convert to bagging or discharging:


# **REAR BAGGING**

- Open rear door and remove mulcher plug. Store mulcher plug in a safe place.
- You can now install the grass catcher or optional clipping deflector.
- To convert to mulching or discharging operation, install mulcher plug into rear discharge opening of mower.

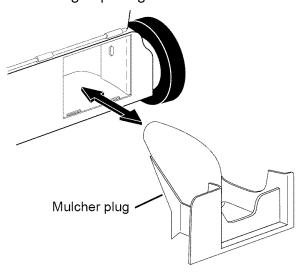


# SIDE DISCHARGING

- Mulcher plug must be installed into rear discharge opening of mower.
- Open mulcher door and install discharge deflector under door as shown.
- Mower is now ready for discharging operation.
- To convert to mulching or bagging operation, discharge deflector must be removed and mulcher door closed.

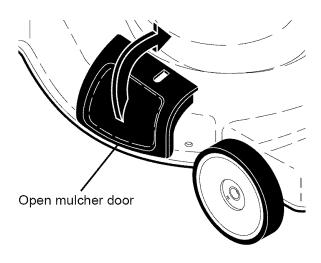



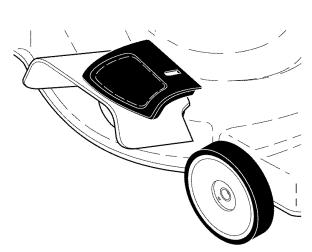

# SIMPLE STEPS TO REMEMBER WHEN CONVERTING YOUR LAWN MOWER

# FOR MULCHING -

- 1. Rear mulcher plug installed.
- 2. Mulcher door closed.

# FOR REAR BAGGING -

- 1. Rear mulcher plug removed.
- 2. Grass catcher installed.
- 3. Mulcher door closed.

# FOR SIDE DISCHARGING -


- 1. Rear mulcher plug installed.
- 2. Discharge deflector installed.

**ACAUTION:** Do not run your lawn mower without mulcher plug or approved grass catcher in place. Never attempt to operate the lawn mower with the rear door removed or propped open.

# TO EMPTY GRASS CATCHER

- 1. Lift up on grass catcher using the frame handle.
- 2. Remove grass catcher with clippings from under lawn mower handle.
- 3. Empty clippings from bag.

**NOTE**: Do not drag the bag when emptying; it will cause unnecessary wear.

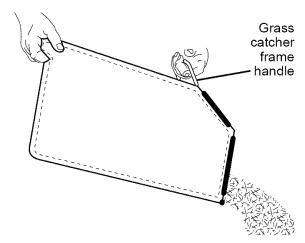

# BEFORE STARTING ENGINE ADD OIL

Your lawnmower is shipped without oil in the engine. For type and grade of oil to use, see "ENGINE" in the Maintenance section of this manual.

▲ CAUTION: DO NOT overfill engine with oil, or it will smoke heavily from the muffler on startup.

- 1. Be sure lawnmower is level.
- 2. Remove oil dipstick from oil fill spout.
- 3. You receive a container of oil with the unit. Slowly pour the entire container down the oil fill spout into the engine.

**NOTE:** Initial oil fill requires only 18 oz. due to residual oil in engine from the manufacturers 100% quality testing. When changing oil you may need 20 oz.

4. Insert and tighten dipstick. **IMPORTANT:** 

# Check oil level before each use. Add oil if needed. Fill to full line on dipstick.


 Change the oil after every 25 hours of operation or each season. You may need to change the oil more often under dusty, dirty conditions. See "TO CHANGE ENGINE OIL" in the Maintenance section of this manual.

# **ADD GASOLINE**

Fill fuel tank to bottom of tank filler neck.
Do not overfill. Use fresh, clean, regular
unleaded gasoline with a minimum of
87 octane. Do not mix oil with gasoline.
Purchase fuel in quantities that can be
used within 30 days to assure fuel freshness.

**A** CAUTION: Wipe off any spilled oil or fuel. Do not store, spill or use gasoline near an open flame.

called gasohol or using ethanol or methanol) can attract moisture which leads to separation and formation of acids during storage. Acidic gas can damage the fuel system of an engine while in storage. To avoid engine problems, the fuel system should be emptied before storage of 30 days or longer. Empty the gas tank, start the engine and let it run until the fuel lines and carburetor are empty. Use fresh fuel next season. See Storage Instructions for additional information. Never use engine or carburetor cleaner products in the fuel tank or permanent damage may occur.

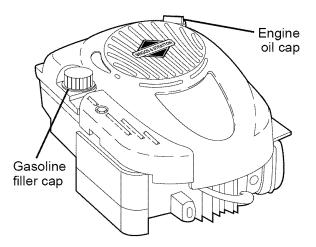

# TO STOP ENGINE

To stop engine, release operator presence control bar.

# TO START ENGINE

**NOTE:** Due to protective coatings on the engine, a small amount of smoke may be present during the initial use of the product and should be considered normal.

- To start a cold engine, push primer three
   (3) times before trying to start. Use a firm push. This step is not usually necessary when starting an engine which has already run for a few minutes.
- 2. Hold operator presence control bar down to the handle and turn the start key.

**IMPORTANT**: Do not crank engine more than five continous seconds between each time you try to start. Wait 5 to 10 seconds between each attempt.

 To start engine using the rope starter, follow the steps above. Exchange the use of the starter rope for start key.
 Pull starter handle quickly. Do not allow starter rope to snap back. **NOTE**: In cooler weather it may be necessary to repeat priming steps. In warmer weather over priming may cause flooding and engine will not start. If you do flood engine wait a few minutes before attempting to start and do not repeat priming steps.

# **MOWING TIPS**


▲ CAUTION: Do not use de-thatcher blade attachments on your mower. Such attachments are hazardous, will damage your mower and could void your warranty.

- Under certain conditions, such as very tall grass, it may be necessary to raise the height of cut to reduce pushing effort and to keep from overloading the engine and leaving clumps of grass clippings. It may also be necessary to reduce ground speed and/or run the lawn mower over the area a second time.
- For extremely heavy cutting, reduce the width of cut by overlapping previously cut path and mow slowly.
- For better grass bagging and most cutting conditions, the engine speed should be set in the FAST position.
- Pores in cloth grass catchers can become filled with dirt and dust with use and catchers will collect less grass. To prevent this, regularly hose catcher off with water and let dry before using.
- Keep top of engine around starter clear and clean of grass clippings and chaff. This will help engine air flow and extend engine life.

# **MULCHING MOWING TIPS**

**IMPORTANT**: For best performance, keep mower housing free of built-up grass and trash. See "CLEANING" in the Maintenance section of this manual.

- The special mulching blade will recut the grass clippings many times and reduce them in size so that as they fall onto the lawn they will disperse into the grass and not be noticed. Also, the mulched grass will biodegrade quickly to provide nutrients for the lawn. Always mulch with your highest engine (blade) speed as this will provide the best recutting action of the blades.
- Avoid cutting your lawn when it is wet.
  Wet grass tends to form clumps and
  interferes with the mulching action. The
  best time to mow your lawn is the early
  afternoon. At this time the grass has
  dried, yet the newly cut area will not be
  exposed to direct sunlight.
- For best results, adjust the lawn mower cutting height so that the lawn mower cuts off only the top one-third of the grass blades. If the lawn is overgrown it will be necessary to raise the height of cut to reduce pushing effort and to keep from overloading the engine and leaving clumps of mulched grass. For extremely heavy grass, reduce your width of cut by overlapping previously cut path and mow slowly.

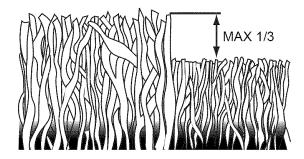

- Certain types of grass and grass conditions may require that an area be mulched a second time to completely hide the clippings. When doing a second cut, mow across (perpendicular) to the first cut path.
- Change your cutting pattern from week to week. Mow north to south one week then change to east to west the next week. This will help prevent matting and graining of the lawn.

# **MAINTENANCE**

	MAINTENANCE SCHEDULE	BEFORE EACH USE	AFTER EACH USE	EVERY 10 HOURS	EVERY 25 HOURS OR SEASON	EVERY 100 HOURS	BEFORE STORAGE
Γ.	Check for Loose Fasteners	<b>\</b>					<b>/</b>
	Clean / Inspect Grass Catcher *	<b>\</b>	<b>V</b>				/
W	Check Tires	<b>\</b>					
M	Check Drive Wheels ***	<b>/</b>					
	Clean Lawn Mower ****		<b>V</b>				/
M	Clean under Drive Cover ***			<b>V</b>			
0	Check Drive Belt / Pulleys ***				<b>V</b>		
W	Check / Sharpen / Replace Blade				<b>√</b> 3		
	Lubrication				<b>V</b>		
# TM	Clean and Recharge Battery **				<b>V</b>		<b>1</b> /4
Г	Check Engine Oil level	<b>1</b> 5					
E					<b>√</b> 1,2		
IN	Clean Air Filter				<b>1</b> /2		
IG	Inspect Muffler				<b>V</b>		
	Replace Spark Plug					<b>V</b>	
	Replace Air Filter Paper Cartridge					<b>1</b> /2	
	Empty fuel system or add Stabilizer						~

- \* (if so equipped)
- \*\* Electric-Start mowers
- \*\*\* Power-Propelled mowers
- \*\*\*\* Use a scraper to clean under deck
- 1 Change more often if operating under a heavy load or in high outdoor temperatures.
- 2 Service more often if operating in dirty or dusty conditions.
- 3 Replace blades more often when mowing in sandy soil.
- 4 Charge 48 hours at end of season.
- 5 And after each 5 hours of use.

# **GENERAL RECOMMENDATIONS**

The warranty on this lawn mower does not cover items that have been subjected to operator abuse or negligence. To receive full value from the warranty, operator must maintain unit as instructed in this manual. Some adjustments will need to be made periodically to properly maintain your unit. At least once a season, check to see if you should make any of the adjustments described in the Service and Adjustments section of this manual.

- At least once a year, replace the spark plug, clean or replace air filter element and check blade for wear. A new spark plug and clean/new air filter element assure proper air-fuel mixture and help your engine run better and last longer.
- Follow the maintenance schedule in this manual.


# **BEFORE EACH USE**

- Check engine oil level.
- Check for loose fasteners.

#### LUBRICATION

Keep unit well lubricated (See "LUBRICATION CHART").

# **LUBRICATION CHART**

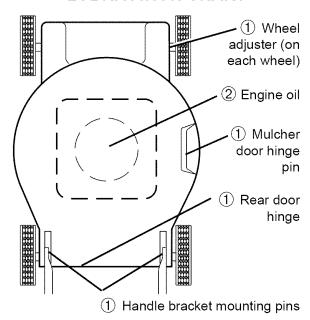

- 1 Spray lubricant
- 2 See "ENGINE" in Maintenance section.

**IMPORTANT:** Do not oil or grease plastic wheel bearings. Viscous lubricants will attract dust and dirt that will shorten the life of the self-lubricating bearings. If you feel they must be lubricated, use only a dry, powdered graphite type lubricant sparingly.

# **LAWN MOWER**

Always observe safety rules when performing any maintenance.

## **TIRES**

- Keep tires free of gasoline, oil, or insect control chemicals which can harm rubber.
- Avoid stumps, stones, deep ruts, sharp objects and other hazards that may cause tire damage.

# **DRIVE WHEELS**

Check rear drive wheels each time before you mow to be sure they move freely. The wheels not turning freely means trash, grass cuttings, etc. are in the drive wheel area and must be cleaned to free drive wheels. If necessary to clean the drive wheels, be sure to clean both rear wheels.

# **BLADE CARE**

For best results, blade must be kept sharp. Replace a bent or damaged blade.

**A CAUTION:** Use only a replacement blade approved by the manufacturer of your mower. Using a blade not approved by the manufacturer of your mower is hazardous, could damage your mower and void your warranty.

# TO REMOVE BLADE

- 1. Disconnect spark plug wire from spark plug and place wire where it cannot come in contact with plug.
- 2. Turn lawn mower on its side. Make sure air filter and carburetor are up.
- 3. Use a wood block between blade and mower housing to prevent blade from turning when removing blade bolt.


**NOTE:** Protect your hands with gloves and/or wrap blade with heavy cloth.

- Remove blade bolt by turning counterclockwise.
- 5. Remove blade & attaching hardware (bolt, lock washer & hardened washer).

# TO REPLACE BLADE

- 1. Position blade on the blade adapter aligning the two (2) holes in the blade with the raised lugs on the adapter.
- 2. Be sure the trailing edge of blade (opposite sharp edge) is up toward the engine.
- 3. Install the blade bolt with the lock washer and hardened washer into blade adapter and crankshaft.
- 4. Use block of wood between blade and lawn mower housing and tighten the blade bolt, turning clockwise.
- The recommended tightening torque is 35-40 ft. lbs.

**IMPORTANT**: Blade bolt is heat treated. If bolt needs replacing, replace only with approved bolt shown in the Repair Parts section of this manual.

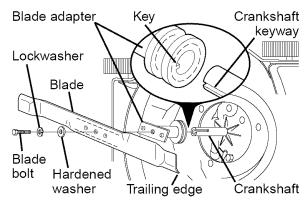

# TO SHARPEN BLADE

**NOTE**: We do not recommend sharpening the blade - but if you do, be sure the blade is balanced. An unbalanced blade will cause eventual damage to mower or engine.

- The blade can be sharpened with a file or on a grinding wheel. Do not attempt to sharpen while on the mower.
- To check blade balance, drive a nail into a beam or wall. Leave about one inch of the straight nail exposed. Place center hole of blade over the head of the nail. If blade is balanced, it should remain in a horizontal position. If either end of the blade moves downward, sharpen the heavy end until the blade is balanced.

# **GRASS CATCHER**


- The grass catcher may be hosed with water, but must be dry when used.
- Check your grass catcher often for damage or deterioration. Through normal use it will wear. If catcher needs replacing, replace only with approved replacement catcher shown in the Repair Parts section of this manual. Give the lawn mower model number when ordering.

# **GEAR CASE**

- To keep your drive system working properly, the gear case and area around the drive should be kept clean and free of trash build-up. Clean under the drive cover twice a season.
- The gear case is filled with lubricant to the proper level at the factory. The only time the lubricant needs attention is if service has been performed on the gear case.
- If lubricant is required, use only Elf Multis EP00. Do not substitute.

# ENGINE LUBRICATION

Use only high quality detergent oil rated with API service classification SG–SL. Select the oil's SAE viscosity grade according to your expected operating temperature.




NOTE: Although multi-viscosity oils (5W30, 10W30 etc.) improve starting in cold weather, these multi-viscosity oils will result in increased oil consumption when used above 32°F. Check your engine oil level more frequently to avoid possible engine damage from running low on oil. Change the oil after every 25 hours of operation orat least once a year if the mower is not used for 25 hours in one year. Check the crankcase oil level before starting the engine and after each five (5) hours of continuous use. Tighten oil plug securely each time you check the oil level.

# TO CHANGE ENGINE OIL

**NOTE**: Before tipping lawn mower to drain oil, empty fuel tank by running engine until fuel tank is empty.

- 1. Disconnect spark plug wire from spark plug and place wire where it cannot come in contact with plug.
- 2. Remove engine oil cap; lay aside on a clean surface.
- Tip lawn mower on its side as shown and drain oil into a suitable container. Rock lawn mower back and forth to remove any oil trapped inside of engine.

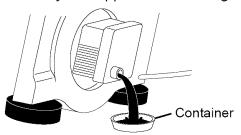

- 4. Wipe off any spilled oil from lawn mower or side of engine.
- Slowly pour oil down the oil fill spout, stopping every few ounces to check the oil level with the dipstick.
- Stop adding oil when you reach the FULL mark on the dipstick. Wait a minute to allow oil to settle.
- Continue adding small amounts of oil, rechecking the dipstick until oil level settles at FULL. DO NOT overfill, or engine will smoke heavily from the muffler on startup.
- 8. Always be sure to retighten oil dipstick before starting engine.
- 9. Reconnect spark plug wire to spark plug.

## **AIR FILTER**


Your engine will not run properly and may be damaged by using a dirty air filter. Replace the air filter cartridge every 100 hours of operation or every season, whichever occurs first. Service air cleaner more often under dusty conditions.

# TO CLEAN AIR FILTER

- 1. Loosen screw and tilt cover to remove.
- Carefully remove cartridge.
- 3. Clean by gently tapping on a flat surface. If very dirty, replace cartridge.

**ACAUTION:** Petroleum solvents, such as kerosene, are not to be used to clean cartridge. They may cause deterioration of the cartridge. Do not oil cartridge. Do not use pressurized air to clean or dry cartridge.

 Install cartridge, then replace cover making sure the tabs are aligned with the slots in the back plate. Fasten screw securely.

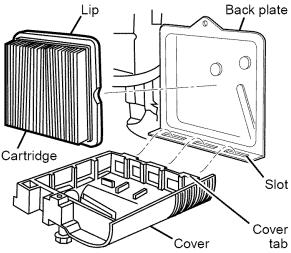

# **MUFFLER**

Inspect and replace corroded muffler as it could create a fire hazard and/or damage.

#### SPARK PLUG

Replace spark plug at the beginning of each mowing season or after every 100 hours of operation, whichever occurs first. Spark plug type and gap setting are shown in the "PRODUCT SPECIFICATIONS" section of this manual.

# **CLEANING**

**IMPORTANT:** For best performance, keep mower housing free of built-grass and trash. Clean the underside of your mower after each use.

**ACAUTION:** Disconnect spark plug wire from spark plug and place wire where it cannot come in contact with plug.

- Clean the underside of your lawn mower by scraping to remove build-up of grass and trash.
- Clean engine often to keep trash from accumulating. A clogged engine runs hotter and shortens engine life.
- Keep finished surfaces and wheels free of all gasoline, oil, etc.

 We do not recommend using a garden hose to clean lawn mower unless the electrical system, muffler, air filter and carburetor are covered to keep water out. Water in engine can result in shortened engine life.

# **CLEAN UNDER DRIVE COVER**

Clean under drive cover at least twice a season. Scrape underside of cover with putty knife or similar tool to remove any build-up of trash or grass on underside of drive cover.

# SERVICE AND ADJUSTMENTS

**A WARNING:** To avoid serious injury, before performing any service and adjustments:

- 1. Release control bar and stop engine.
- 2. Make sure the blade and all moving parts have completely stopped.
- 3. Disconnect spark plug wire from spark plug and place wire where it cannot come in contact with plug.

# **LAWN MOWER**

# TO ADJUST CUTTING HEIGHT


See "TO ADJUST CUTTING HEIGHT" in the Operation section of this manual.

# REAR DEFLECTOR


The rear deflector, attached between the rear wheels of your mower, is provided to minimize the possibility that objects will be thrown out of the rear of the mower into the operator mowing position. If the deflector becomes damaged, it should be replaced.

# TO REMOVE DRIVE BELT

- 1. Disconnect spark plug wire from spark plug and place wire where it cannot come in contact with plug.
- Remove screws retaining drive cover (not shown); and remove drive cover from lawn mower housing.
- 3. Remove drive cable from anchor, then detach it and return spring from idler arm assembly.

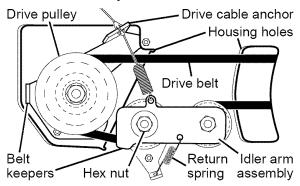

- 4. Remove idler arm assembly from housing by removing hex nut; then remove drive belt from drive pulley, belt keepers and idler arm assembly.
- 5. Turn lawn mower on its side. Make sure air filter and carburetor are up.
- 6. Remove screw securing debris shield. Note that the debris shield has a tab which fits into a gap in the housing.

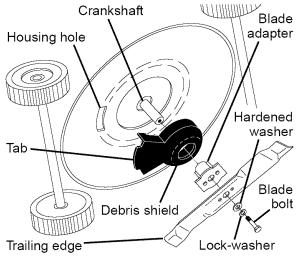

7. Use a wood block between blade and mower housing to prevent blade from turning when removing blade bolt.

**NOTE:** Protect your hands with gloves and/or wrap blade with heavy cloth.

- 8. Remove blade bolt.
- Remove blade, attaching hardware (bolt, lock washer, hardened washer), blade adapter and debris shield. Note that the debris shield has a tab which fits into the housing hole.
- 10. Remove drive belt from engine pulley; discard old belt.

# TO REPLACE DRIVE BELT

- 1. Place new drive belt on engine pulley.
- 2. Route the other end of the new drive belt through hole in housing.
- 3. Return mower to upright position.
- 4. Install new drive belt into idler arm assembly, then around the drive pulley. Be sure belt is inside of belt keepers.
- 5. Reattach idler arm assembly with hex nut previously removed.
- 6. Turn lawn mower on its side. Make sure air filter and carburetor are up.
- 7. Reattach debris shield to housing with tab of debris shield in housing hole.
- 8. Position blade on the blade adapter aligning the two (2) holes in the blade with the raised lugs on the adapter.

- 9. Be sure the trailing edge of blade (opposite sharp edge) is up toward the engine as shown.
- 10. Install the blade bolt with the lock washer and hardened washer into blade adapter and crankshaft.
- 11. Use block of wood between blade and lawn mower housing and tighten the blade bolt, turning clockwise.
- The recommended tightening torque is 35-40 ft. lbs.


**IMPORTANT**: Blade bolt is heat treated. If bolt needs replacing, replace only with approved bolt shown in the Repair Parts section of this manual.

- 12. Return mower to upright position.
- 13. Reattach drive cable and return spring to the idler arm assembly, then reattach drive cable to anchor.
- 14. Reattach drive cover with screw(s) previously removed.
- 15. Connect spark plug wire to spark plug.

# TO ADJUST HANDLE

Your handle has three (3) height positions - adjust to a height that suits you.

- 1. Remove knob and carriage bolt on one side of the lower handle.
- While holding handle assembly, remove knob and carriage bolt from opposite side, align hole in handle with desired hole in handle bracket and reassemble bolt and knob and tighten securely.
- 3. Align opposite side of handle with same positioning hole and secure with bolt and knob.

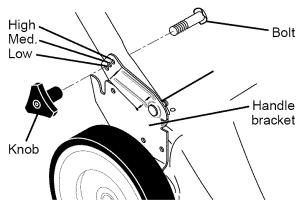

# **ENGINE**

# **ENGINE SPEED**

Your engine speed has been factory set. Do not attempt to increase engine speed or it may result in personal injury. If you believe that engine is running too fast or too slow, take your mower to a Sears or other qualified service center for repair and adjustment.

# **CARBURETOR**

Your carburetor is not adjustable. If your engine does not operate properly due to suspected carburetor problems, take your lawn mower to a Sears or other qualified service center for repair and/or adjustment.

**IMPORTANT:** Never tamper with the engine governor, which is factory set for proper engine speed. Overspeeding the engine above the factory high speed setting can be dangerous. If you think the engine-governed high speed needs adjusting, contact a Sears or other qualified service center, which has proper equipment and experience to make any necessary adjustments.

# **STORAGE**

Immediately prepare your lawn mower for storage at the end of the season or if the unit will not be used for 30 days or more.

# **LAWN MOWER**


When lawn mower is to be stored for a period of time, clean it thoroughly, remove all dirt, grease, leaves, etc. Store in a clean, dry area.


- Clean entire lawn mower (See "CLEANING" in the Maintenance section of this manual).
- 2. Lubricate as shown in the Maintenance section of this manual.
- Be sure that all nuts, bolts, screws, and pins are securely fastened. Inspect moving parts for damage, breakage and wear. Replace if necessary.
- 4. Touch up all rusted or chipped paint surfaces; sand lightly before painting.

## **HANDLE**

You can fold your handle for storage.

- 1. Loosen the two (2) handle knobs on sides of the upper handle and allow handle to fold down to the rear.
- 2. Remove the two (2) handle knobs and carriage bolts on sides of the lower handle and pivot entire handle assembly forward and allow it to rest on mower.

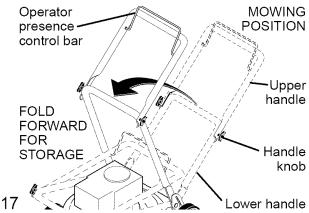

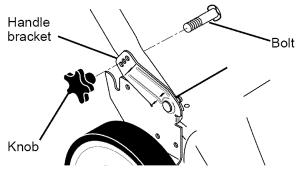

- 3. Reinstall knobs and carriage bolts to lower handle / handle brackets for safe keeping.
- When setting up your handle from the storage position, lower handle will require manually locking into moving position.

**IMPORTANT:** When folding the handle for storage or transportation, be sure to fold the handle as shown or you may damage the control cables.

# **ENGINE**

# **FUEL SYSTEM**

**IMPORTANT**: It is important to prevent gum deposits from forming in essential fuel system parts such as carburetor, fuel filter, fuel hose, or tank during storage. Alcohol blended fuels (called gasohol or using ethanol or methanol) can attract moisture which leads to separation and formation of acids during storage. Acidic gas can damage the fuel system of an engine while in storage.

- Empty the fuel tank by starting the engine and letting it run until the fuel lines and carburetor are empty.
- Never use engine or carburetor cleaner products in the fuel tank or permanent damage may occur.
- · Use fresh fuel next season.

**NOTE:** Fuel stabilizer is an acceptable alternative in minimizing the formation of fuel gum deposits during storage. Add stabilizer to gasoline in fuel tank or storage container.

Always follow the mix ratio found on stabilizer container. Run engine at least 10 minutes after adding stabilizer to allow the stabilizer to reach the carburetor. Do not empty the gas tank and carburetor if using fuel stabilizer.

# **ENGINE OIL**

Drain oil (with engine warm) and replace with clean engine oil. (See "ENGINE" in the Maintenance section of this manual).

# **CYLINDER**

- 1. Remove spark plug.
- 2. Pour one ounce (29 ml) of oil through spark plug hole into cylinder.
- 3. Pull starter handle slowly a few times to distribute oil.
- 4. Replace with new spark plug.

#### **BATTERY**

Disconnect the battery from the engine connector and charge battery 48 hours.

# **OTHER**

- Do not store gasoline from one season to another.
- Replace your gasoline can if your can starts to rust. Rust and/or dirt in your gasoline will cause problems.
- If possible, store your unit indoors and cover it to protect it from dust and dirt.
- Cover your unit with a suitable protective cover that does not retain moisture.
   Do not use plastic. Plastic cannot breathe, which allows condensation to form and will cause your unit to rust.

**IMPORTANT**: Never cover mower while engine and exhaust areas are still warm.

**ACAUTION:** Never store the lawn mower with gasoline in the tank inside a building where fumes may reach an open flame or spark. Allow the engine to cool before storing in any enclosure.

TROUBLESHOOTING - See appropriate section in manual unless directed to a Sears Parts & Repair Center.

PROBLEM	CAUSE	CORRECTION
Does not start	<ol> <li>Dirty air filter.</li> <li>Out of fuel.</li> </ol>	<ol> <li>Clean/replace air filter.</li> <li>Fill fuel tank.</li> </ol>
	3. Stale fuel.	3. Empty fuel tank and refill tank with fresh, clean gasoline.
	4. Water in fuel.	4. Empty fuel tank and refill tank with fresh, clean gasoline.
	5. Spark plug wire disconnected.	5. Connect wire to plug.
	6. Bad spark plug.	6. Replace spark plug.
	7. Loose blade or broken blade adapter.	7. Tighten blade bolt or replace blade adapter.
	<ol><li>Control bar in released position.</li></ol>	<ol><li>Depress control bar to handle.</li></ol>

# TROUBLESHOOTING - See appropriate section in manual unless directed to a Sears Parts & Repair Center.

PROBLEM	CAUSE	CORRECTION
Does not start (continued)	<ol> <li>Control bar defective.</li> <li>Fuel valve lever (if so equipped) in OFF position.</li> <li>Weak battery (if equipped).</li> <li>Disconnected battery connector (if equipped).</li> </ol>	<ul><li>9. Replace control bar.</li><li>10. Turn fuel valve lever to the ON position.</li><li>11. Charge battery.</li><li>12. Connect battery to engine.</li></ul>
Loss of power	<ol> <li>Rear of mower housing or blade dragging in grass.</li> <li>Cutting too much grass.</li> <li>Dirty air filter.</li> <li>Buildup of grass, leaves, and trash under mower.</li> <li>Too much oil in engine.</li> <li>Walking speed too fast.</li> </ol>	<ol> <li>Raise cutting height.</li> <li>Raise cutting height.</li> <li>Clean/replace air filter.</li> <li>Clean underside of mower housing.</li> <li>Check oil level.</li> <li>Cut at slower walking speed.</li> </ol>
Poor cut – uneven	<ol> <li>Worn, bent or loose blade.</li> <li>Wheel heights uneven.</li> <li>Buildup of grass, leaves and trash under mower.</li> </ol>	<ol> <li>Replace blade. Tighten blade bolt.</li> <li>Set all wheels at same height.</li> <li>Clean underside of mower housing.</li> </ol>
Excessive vibration	<ol> <li>Worn, bent or loose blade.</li> <li>Bent engine crankshaft.</li> </ol>	Replace blade. Tighten blade bolt.     Contact a Sears or other qualified service center.
Starter rope hard to pull	<ol> <li>Engine flywheel brake is on when control bar is released.</li> <li>Bent engine crankshaft.</li> <li>Blade adapter broken.</li> <li>Blade dragging in grass.</li> </ol>	<ol> <li>Depress control bar to upper handle before pulling the starter rope.</li> <li>Contact a Sears or other qualified service center.</li> <li>Replace blade adapter.</li> <li>Move lawn mower to cut grass or to hard surface.</li> </ol>
Grass catcher not filling (If so equipped)	<ol> <li>Cutting height too low.</li> <li>Lift on blade worn off.</li> <li>Catcher not venting air.</li> </ol>	<ol> <li>Raise cutting height.</li> <li>Replace blade.</li> <li>Clean grass catcher.</li> </ol>
Hard to push	<ol> <li>Grass is too high or wheel height is too low.</li> <li>Rear of mower housing or blade dragging in grass.</li> <li>Grass catcher too full.</li> <li>Handle height position not right for you.</li> </ol>	<ol> <li>Raise cutting height.</li> <li>Raise rear of mower housing one (1) setting higher.</li> <li>Empty grass catcher.</li> <li>Adjust handle height to suit.</li> </ol>
Loss of drive or slowing of drive speed	<ol> <li>Belt wear.</li> <li>Belt off of pulley.</li> <li>Drive cable worn or broken.</li> <li>"Loose" drive control system.</li> </ol>	<ol> <li>Check/replace drive belt.</li> <li>Check/reinstall drive belt.</li> <li>Replace drive cable.</li> <li>Adjust drive control.</li> </ol>

# **TABLA DE MATERIAS**

Garantía	20	Programa de Mantenimiento	
Reglas de Seguridad	20-22	Servicio y Adjustes	34-35
Especificaciones del Producto			
Montaje / Pre-Operación	24-25	Identificación de problemas	36-37
Operación			
Mantenimiento	31-34	Servicio Sears	Contratapa

# **GARANTÍA**

# GARANTÍA TOTAL DE LA CORTADORA DE CÉSPED CRAFTSMAN POR 2 AÑOS

Si esta Segadora Craftsman llega a presentar algún desperfecto por defectos de materiales o fabricación durante un plazo de dos años a partir de la fecha de compra, llévela de vuelta a cualquiera de las tiendas Sears, al Centro de Repuestos y Reparación, o a otro comercio donde se vendan los equipos Craftsman, a efectos de que se la reparen sin costo (o bien se la reemplacen, en caso que no sea posible repararla).

Si esta Segadora llega a ser utilizada con fines comerciales o arrendada, la presente garantía tendrá vigencia por sólo 90 días a partir de la fecha de compra.

La presente garantía no cubre:

- Aquellas piezas fungibles que se desgastan por el uso normal, tales como las cuchillas rotatorias de la cortadora, los adaptadores de las cuchillas, las correas, los filtros de aire y las bujías.
- Aquellas reparaciones que haya que hacer debido a mal uso o negligencia por parte del operador, incluidos el árbol del cigüeñal torcido u omisiones relativas al armado, manejo o mantenimieno de la Segadora en un todo de acuerdo a las instrucciones provistas con el equipo.

La presente garantía se aplicará solamente en tanto el artículo sea usado en los Estados Unidos.

Esta garantía le otorga a usted derechos legales específicos; puede que usted tenga, además, otros derechos, los cuales varían de estado a estado.

Sears, Roebuck and Co., Hoffman Estates, IL 60179

# **REGLAS DE SEGURIDAD**

**IMPORTANTE:** Esta maquina cortadaora es capaz de amputar las manos y los manos y los pies y de lanzar objetos. Si no se observan las instrucciones de seguridad siguientes se pueden producir lesiones graves o la muerte.

ABusque este símbolo que señala las precauciones de seguridad de importancia. Quiere decir – ¡¡¡ATENCIÓN!!! ¡¡¡ESTE ALERTO!!! SU SEGURIDAD ESTA COMPROMETIDA.

ADVERTENCIA: Siempre desconecte el alambre de la bujía y póngalo donde no pueda entrar en contacto con la bujía, para evitar el arranque por accidente, durante la preparación, el transporte, el ajuste o cuando se hacen reparaciones.

ADVERTENCIA: Los bornes, terminales y accesorios relativos de la batería contienen plomo o compuestos de plomo, productos químicos conocidos en el Estado de California como causa de cáncer y defectos al nacimiento u otros daños reproductivos. Lavar las manos después de manipularlos.

⚠PRECAUCIÓN: El tubo de escape del motor, algunos de sus constituyentes y algunos componentes del vehículo contienen o desprenden productos químicos conocidos en el Estado de California como causa de cáncer y defectos al nacimiento u otros daños reproductivos.

APRECAUCIÓN: El silenciador y otras piezas del motor llegan a sre extremadamente calientes durante la operación y siguen siendo calientes después de que el motor haya parado. Para evitar quemaduras severas, permanezca lejos de estas áreas.



### I. OPERACION

- Antes de empezar, debe familiarizarse completamente con los controles y el uso correcto de la maquina. Para esto, debe leer y comprender todas las instrucciones que aparecen en la maquina y en los manuales de operación.
- No ponga las manos o los pies cerca o debajo de las partes rotatorias. Manténgase siempre lejos de la abertura de la descarga.
- Permita que solamente las personas responsables que estén familiarizadas con las instrucciones operen la máquina.
- Despeje el área de objetos tales como piedras, juguetes, alambres, huesos, palos, etc. que pueden ser recogidos y lanzados por las cuchillas.
- Asegúrese que el área no se hallen personas, antes de segar. Pare la máquina si alguien entra en el área.
- No opere la maquina sin zapatos o con sandalias abiertas. Póngase siempre zapatos sólidos.
- No tire de la segadora hacia atrás a menos que sea absolutamente necesario. Mire siempre hacia abajo y hacia detrás antes y mientras que se mueve hacia atrás.
- Nunca dirigir el material descargado hacia las personas. Evitar descargar material contra paredes o barreras. El material puede retornar al operador. Para la cuchilla cuando se pasa por superficies de grava.
- No opere la segadora sin los respectivos resguardos, las placas, el recogedor de césped u otros aditamentos dise ados para su protección y seguridad.
- Refiérase a las instrucciones del fabricante para el funcionamiento e instalación de accesorios. Use únicamente accesorios aprobados por el fabricante.
- Detenga la cuchilla o las cuchillas cuando cruce por calzadas, calles o caminos de grava.
- Parar el motor cada vez que se abandona el aparato, antes de limpiar la segadora o de remover residuos del tubo.
- Apagar el motor y esperar hasta que las cuchillas estén completamente paradas antes de remover el receptor de hierba.
- Segar solamente con luz del día o con una buena luz artificial.
- No opere la máquina bajo la influencia del alcohol o de las drogas.
- Nunca opere la maquina cuando la hierba esté mojada. Asegúrese siempre de tener buena tracción en sus pies; mantenga el mango firmemente y camine; nunca corra.
- Desconectar el mecanismo de propulsión autónoma o el embrague de transmisión en las segadoras que lo tienen antes de poner en marcha el motor.
- Si el equipo empezara a vibrar de una manera anormal, pare el motor y revise de inmediato para averiguar la causa. Generalmente la vibración suele indicar que existe alguna avería.

 Siempre use gafas de seguridad o anteojos con protección lateral cuando opere la segadora.

# II. OPERACION SOBRE LAS CUESTAS

Los accidentes ocurren con más frecuencia en las cuestas. Estos accidentes ocurren debido a resbaladas o caídas, las cuales pueden resultar en graves lesiones. Operar la recortadora en cuestas requiere mayor concentración. Si se siente inseguro en una cuesta, no la recorte.

#### HACER:

- Puede recortar a través de la superficie de la cuesta, nunca hacia arriba y hacia abajo.
   Proceda con extrema precaución cuando cambie de dirección en las cuestas.
- Renueva todos los objetos extraños, tales como guijarros, ramas, etc.
- Debe prestar atención a hoyos, baches o protuberancias. Recuerde que la hierba alta puede esconder obstáculos.

### NO HACER:

- No recorte cerca de pendientes, zanjas o terraplenes. El operador puede perder la tracción en los pies o el equilibrio.
- No recorte cuestas demasiado inclinadas.
- No recorte en hierba mojada. La reducción en la tracción de la pisada puede causar resbalones.

# III. NIÑOS

Se pueden producir accidentes trágicos si el operador no presta atención a la presencia de los niños. A menudo, los niños se sienten atraídos por la máquina y por la actividad de la siega. Nunca suponga que los niños van a permanecer en el mismo lugar donde los vio por última vez.

- Mantenga a los niños alejados del área de la siega y bajo el cuidado estricto de otra persona adulta responsable.
- Esté alerta y apague la máquina si hay niños que entran al área.
- Antes y cuando este retrocediendo, mire hacia atrás y hacia abajo para verificar si hay niños pequeños.
- Nunca permita que los niños operen la máquina.
- Tenga un cuidado extra cuando se acerque a esquinas donde no hay visibilidad, a los arbustos, árboles u otros objetos que pueden interferir con su línea de visión.

## IV. MANEJO SEGURO DE GASOLINA

Usar mucha atención cuando se maneja gasolina. La gasolina es extremamente inflamable y los vapores son explosivos.

- Apagar todos los cigarrillos, cigarros, pipas y otras fuentes de ignición.
- · Usar solo un contenedor apropiado.
- Nunca quitar el tapón de la gasolina o añadir carburante con el motor en marcha. Esperar que el motor se enfríe antes de repostar la gasolina.

- Nunca repostar la máquina al interior de un local
- Nunca guardar la máquina o el contenedor de gasolina donde hay una llama abierta, chispa o luz piloto como una caldera u otros dispositivos.
- Nunca llenar contenedores en un vehículo, en un camión o caravana con un forro de plástico. Colocar siempre los contenedores en el suelo lejos de su vehículo antes de llenar.
- Quitar equipos que funcionan con gasolina del camión o caravana y repostar en el suelo. Si esto no es posible, repostar dicho equipo con un contenedor portátil, más bien que con una tobera de gasolina.
- Mantener la tobera en contacto con el bordo del depósito de carburante o de la apertura del contenedor siempre hasta terminar el abastecimiento. No usar un dispositivo de cierre-apertura de la tobera.
- Si el carburante cae en la ropa que se lleva, cambiársela inmediatamente.
- Nunca llenar en exceso el depósito de carburante. Colocar el tapón de la gasolina y apretar de modo seguro.

## V. SERVICIO

- Nunca haga funcionar una máquina dentro de un área cerrada.
- Nunca haga ajustes o reparaciones mientras el motor esté en marcha. Desconecte el cable de la bujía, y manténgalo a cierta distancia de ésta para prevenir un arranque accidental.

- Mantenga las tuercas y los pernos, especialmente los pernos del accesorio de la cuchilla, apretados y mantenga el equipo en buenas condiciones.
- Nunca manipule de forma indebida los dispositivos de seguridad. Controle regularmente su funcionamiento correcto.
- Mantenga la máquina libre de hierba, hojas u otras acumulaciones de desperdicio.
   Limpie los derrames de aceite o combustible.
   Permita que la máquina se enfríe antes de almacenarla.
- Pare e inspeccione el equipo si le pega a un objeto. Repárelo, si es necesario, antes de hacerlo arrancar.
- En ningún caso hay que regular la altura de las ruedas mientras el motor está en marcha.
- Los componentes del receptor de la hierba van sujetos a desgaste, daños y deterioro, que pueden exponer las partes en movimiento o permitir que objetos sean disparados. Controlar frecuentemente y cuando sea necesario sustituir con partes aconsejadas por el fabricante.
- Las cuchillas de la segadora están afiladas y pueden cortar. Cubrir las hojas o llevar guantes, y utilizar precauciones especiales cuando se efectúa mantenimiento sobre las mismas.
- No cambie el ajuste del regulador del motor ni exceda su velocidad.
- Mantener o sustituir las etiquetas de seguridad e instrucciones, cuando sea necesario.

♣ADVERTENCIA: Este segadora viene equipado con un motor de combustión interna y no se debe usar sobre, o cerca, de un terreno no desarrollado cubierto de bosques, de arbustos o de césped, o menos que el sistema de escape del motor venga equipado con un amortiguador de chispas que cumpla con las leyes locales o estatales (si existen). Si se usa un amortiguador de chispas, el operador debe mantenerlo en condiciones de trabajo eficientes.

En el estado de California, la ley exige lo anterior (Sección 4442 del "California Public Resources Code"). Otros estados pueden contar con otras leyes parecidas. Las leyes federales se aplican en la tierras federales. Su centro de Servicio más cercano tiene disponible amortiguadores de chispas para el silenciador (Vea la sección de PARTES DE REPUESTO en el manual Inglés del dueño).

ESPECIFICACIONES DEL PRODUCTO					
Número de Serie:					
Fecha de Compra:					
Capacidad y Tipo de Gasolina:	1.6 Cuartos (Regular sin Plomo)				
Tipo de Aceite (API SG-SL):	SAE 30 (Sobre 32°F); SAE 5W-30 (Debajo 32°F)				
Capacidad de Aceite:	20 Onzas				
Bujía (Abertura: .030")	Champion RJ19HX				
Torsión del Perno de la Cuchilla:	35-40 ft. lbs.				
• El número del nodelo y el de serie se encuentran en la calcomania adjunta a la parte trasera					

de la caja de la segadora. Debe registrar tanto el número de serie come la fecha de compra y

mantengalos en un lugar seguro para refencia en el futuro.

# Acuerdos de Protección para la Reparación

Congratulaciones por su buena compra. Su nuevo producto Craftsman® está diseñado y fabricado para funcionar de modo fiable por muchos años. Pero como todos los productos, puede necesitar alguna reparación de tanto en tanto. En este caso tener un Acuerdo de Protección para la Reparación puede hacerles ahorrar dinero y fastidios.

Compre ahora un Acuerdo de Protección para la Reparación y protégese de molestias y gastos inesperados.

Un Acuerdo incluye los puntos siguientes:

- Servicio experto de nuestros 12.000 especialistas profesionales en la reparación.
- Servicio ilimitado sin cargo alguno para las partes y la mano de obra sobre todas las reparaciones garantizadas.
- Sustitución del producto si su producto garantizado no puede ser arreglado.
- Descuento del 10% sobre el precio corriente del servicio y de las partes relativas al servicio no cubiertas por el acuerdo; también el 10% menos sobre el precio corriente de un control de mantenimiento preventivo.

 Ayuda rápida por teléfono – soporte telefónico por parte de un representante Sears sobre productos que requieren un arreglo en casa, y además una programación sobre los a reglos más convenientes.

Cuando se ha comprado el Acuerdo, basta con una llamada telefónica para programar el servicio. Puede llamar cuando quiera, día y noche o fijar en línea una cita para obtener el servicio. Sears tiene más de 12.000 especialistas profesionales en la reparación, que tienen acceso a más de 4.5 millones de partes y accesorios de calidad. Este es el tipo de profesionalidad con que puede contar para ayudar a alargar la vida del producto que acaba de comprar, por muchos años. ¡Compre hoy su Acuerdo de Protección para la Reparación! Se aplican algunas limitaciones y exclusiones. Para conocer los precios y tener más información, llame al 1-800-827-6655. Servicio de Instalación Sears

Para la instalación profesional Sears de aparatos de casa, puertas de garaje, calentadores de agua y otros importantes artículos para la casa, en U.S.A. llamar a 1-800-4-MY-HOME®.

# **ACCESORIOS PARA LA SEGADORA**

Estos accesorios estaban disponibles cuando se produjo la segadora. **No son facilitados junto al cortacesped**. También están disponibles en la mayoría de las tiendas de Sears y en los centros de servicio. Algunos de estos accesorios tal vez no se apliquen a su segadora.





# MANTENIMIENTO DE LA SEGADORA



# **MONTAJE / PRE-OPERACIÓN**

Lea estas instrucciones y el manual completamente antes de tratar de montar u operar su segadora nueva.

**IMPORTANTE:** Este cortacesped viene SIN ACEITE O GASOLINA en el motor.

Su segadora nueva ha sido montada en la fábrica con la excepción de aquellas partes que se dejaron sin montar por razones de envío. Todas las partes como las tuercas, las arandelas, los pernos, etc., que son necesarias para completar el montaje han sido colocadas en la bolsa de partes. Para asegurarse que su segadora funcione en forma segura y adecuada, todas las partes y los artículos de ferretería que se monten tienen que ser apretados seguramente. Use las herramientas correctas, como sea necesario, para asegurar que se aprieten adecuadamente.

# PARA REMOVER LA SEGADORA DE LA CAJA DE CARTÓN

- Remueva las partes sueltas que se incluyen con la segadora.
- Corte las dos esquinas de los extremos de la caja de cartón y tienda el panel del extremo plano.
- Remueva todo el material de empaque, excepto la cuña entre el mango superior y él inferior, y la cuña que sujeta la barra de los control que exige la presencia del operador junto con el mango superior.
- Haga rodar la segadora hacia afuera de la caja de cartón y revísela cuidadosamente para verificar si todavía quedan partes sueltas adicionales.


# COMO PREPARAR SU SEGADORA


PARA DESDOBLAR EL MANGO

**IMPORTANTE:** Despliegue el mango con mucho cuidado para no pellizcar o dañar los cables de control.

- Levante la sección del mango inferior hasta la posición de operación y alinee el agujero en éste con uno de los tres agujeros para determinar la altura en el puntal del mango.
- Inserte el perno del mango a través de éste y del puntal y asegúrelo con la manilla.
- Repita el procedimiento para el lado opuesto del mango.
- Levante la sección del mango superior hasta la posición de operación, remueva la cuña protectora y apriete las manillas del mango en forma segura.
- 5. Remueva el material de empaque de alrededor de la barra de control.

El mango de la segadora puede ajustarse según le acomode para segar. Refiérase a "AJUSTE DEL MANGO" en la Sección de Servicio y Ajustes de este manual.

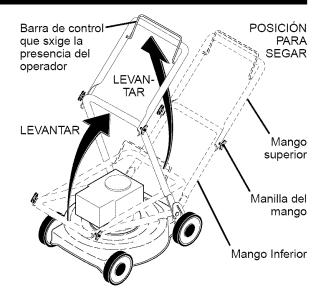


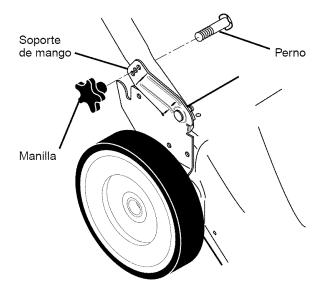

# PARA MONTAR EL RECOGEDOR DE CÉSPED

- Ponga el bastidor del recogedor de césped en la bolsa del césped con la parte rígida de la bolsa en la parte inferior. Asegúrese que el mango del bastidor esté en el exterior de la parte superior de la bolsa.
- Deslice los sujetadores de vinilo sobre el bastidor.

**AVISO:** Si los sujetadores de vinilo están muy duros, métalos en agua caliente por algunos minutos. Si se moja la bolsa, déjela que se seque antes de usarla.

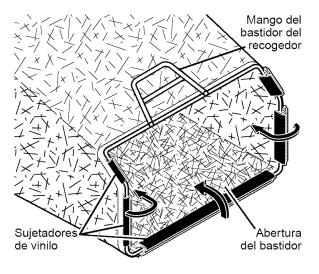

## PARA INSTALAR LOS ACCESORIOS

Su segadora fue enviada lista para usarse como una acolchadora de capa vegetal. Para convertirla de modo que pueda ensacar o descargar, refiérase a "PARA CONVERTIR LA SEGADORA" en la sección de Operación de este manual.

# PARA PREPARAR LA BATERÍA

**AVISO:** Su batería tiene que estar cargada antes de que pueda hacer arrancar su segadora.


- Conecte el conector del cargador de la batería (macho) al conector de la arnés (hembra).
- Enchufe el cargador de la batería dentro del enchufe de 110 volt C.A.
- 3. Deje el cargador de la batería conectado por 24 horas antes de hacer arrancar su motor por la primera vez.
- Después de cargar, desconecte el conector de la arnés (hembra) al conector de la cargador de la batería (macho).

Conecte su cargador de batería para cargarla según después decada uso.

**IMPORTANTE**: El motor no cargara una batería.

Al final de la temporada de siega, la batería se debe cargar por 48 horas para protegerla durante el período de almacenamiento en el invierno.

⚠PRECAUCIÓN: Siempre desconecte el conector del motor del conector de la batería para evitar el arranque por accidente al transportar o guardar su segadora después de la temporada.

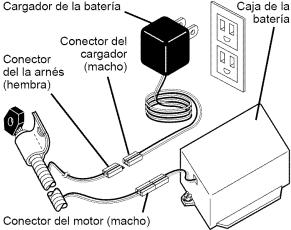

# **OPERACIÓN**

# **FAMILIARICESE CON SU SEGADORA**

LEA ESTE MANUAL DEL DUENO Y LAS REGLAS DE SEGURIDAD ANTES DE OPARAR SU SEGADORA. Compare las ilustraciones con su segadora para familiarizarse con la ubicación de los diversos controles y ajustes. Guarde este manual para referencia en el futuro.

Estos símbolos pueden apareser sobre su segadora o en la literatura proporcionada con el producto. Aprenda y comprenda sus significados.

















ATTENCIÓN O ADVERTENCIA ENCENDIDO APAGADO


MOTOR

MOTOR

LENTO LACIÓN

BUSTIBLE

PELIGRO, GUARDE LAS **ACEITE** MANOS Y LOS PIES LEJOS

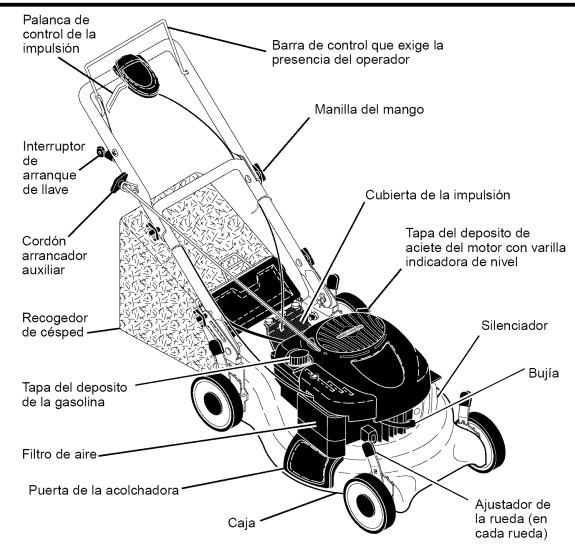

IMPORTANTE: Este cortacésped viene SIN ACEITE O GASOLINA en motor.

# **CUMPLE CON LOS REQUISITOS DE SEGURIDAD DE LA CPSC**

Las segadoras a motor, que se conducen desde la parte de atrás, rotatorias, Sears, cumplen con los estándares de seguridad del American National Standards Institute y de la U.S. Consumer Product Safety Commission. La cuchilla gira cuando el motor está funcionando.

Barra de control que exige la presencia del operador – tiene que sujetarse abajo, junto con el mango, para hacer arrancar el motor. Suéltela para parar el motor.

Palanca de control de la impulsion - se usa para enganchar la segadora para movimiento hacia adelante impulsada a motor.

Puerta de la acolchadora - permite la conversión para la operación de descarga o ensacado. Cordón arrancador auxiliar – se usa para hacer arrancar el motor.

Interruptor de arranque de llave - se usa para hacer arrancar el motor.



La operación de cualquier segadora puede hacer que salten objetos extraños dentro de sus ojos, lo que puede producir daños graves en éstos. Siempre

use anteojos de seguridad o protección para los ojos mientras opere su segadora o cuando haga ajustes o reparaciones. Recomendamos gafas o una mascara de seguridad de visión amplia de seguridad usada sobre las gafas.

# **COMO USAR SU SEGADORA VELOCIDAD DEL MOTOR**

La velocidad del motor se estableció en la fábrica para un rendimiento óptimo. La velocidad no se puede ajustar.

# **CONTROL DE ZONA DEL MOTOR**

A PRECAUCIÓN: Las regulaciones federales exigen que se instale un control para el motor en esta segadora para reducir a un mínimo el riesgo de lesionarse debido al contacto con la cuchilla. Por ningún motivo trate de eliminar la función del control del operador. La cuchilla gira cuando el motor está funcionando.

Su segadora viene equipada con una barra de controles que exigen la presencia del operador, lo que requiere que el operador esté detrás del mango de la segadora para hacerla arrancar y operarla.

# CONTROL DE LA IMPULSIÓN

- La autopropulsión se controla manteniendo la palanca de mando operador presente abajo hacia el mango y tirando la palanca de accionamiento atrás hacia el mango. Cuanto más lejos se tira la palanca hacia el mango, más rápida irá la unidad.
- El movimiento hacia adelante se detiene cuando sea la palanca de mando operador presente o la palanca de accionamiento se sueltan. Para detener el movimiento hacia adelante sin apagar el motor, soltar sólo la palanca de accionamiento. Mantener la palanca de mando operador presente abajo contra el mango para continuar a cortar sin autopropulsión.

AVISO: Si después haber desenganchado de la palanca de control, la segadora no roda hacia atrás, empuje la segadora un poco hacia adelante para desenganchar las ruedas de la impulsión.

Barra de control que exige la presencia del operador



## AJUSTE DEL MANDO

Ocasionalmente, el sistema de mando puede "aflojarse", provocando una disminución de la velocidad. Hay un torniquete en la sede del mando para apretar la tensión del cable. Proceder de la siguiente manera:


- Apagar la unidad y desconectar el cable de bujía de la bujía.
- 2. Vuelta el torniquete para aumentar la velocidad del mecanismo.
- 3. Opere la segadora para probar la velocidad del mecanismo. Reajuste según lo requerido.
- Si las condiciones no mejoran después de los pasos descritos (la velocidad hacia adelante queda la misma), la correa de transmisión está desgastada y tiene que ser sustituida.

# PARA AJUSTAR LA ALTURA DE CORTE

Levante las ruedas para el corte bajo y baje las ruedas para el corte alto., ajuste la altura de corte para que se acomode a sus requisitos. La posición del medio es la mejor para la mayoría de los céspedes.

· Para cambiar la altura de corte, empuje la palanca del ajustador hacia la rueda. Mueva la rueda hacia arriba o hacia abajo de modo que se acomode a sus requisitos. Asegúrese que todas las ruedas queden igualmente ajustadas.

AVISO: El ajustador esta correctamente colocado cuando las orejas de la placa están insertadas en el agujero del mango. También, los ajustes de 9 posiciones (si equipado) permiten que el mango pueda ser movido entre las oreias de la placa.

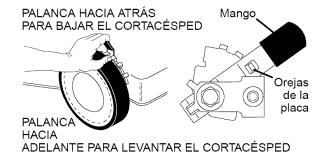


# PARA CONVERTIR LA SEGADORA

Su segadora fue enviada lista para usarse como acolchadora de capa vegetal. Para convertirla a una operación de ensacado o de descarga:

# SEGADORAS CON DESCARGA TRASERA

- Abra la puerta trasera y remueva la tapón acolchadora. Guárdela en un lugar seguro.
- Ahora puede instalar el recogedor o el desviador de recortes opcional.
- Para volver a la operación de acolchamiento o descarga, el tapón acolchador en la abertura de descarga de la segadora.

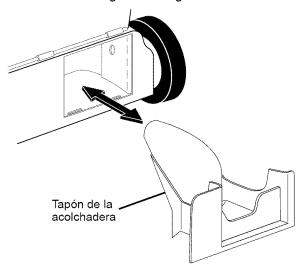




- La tapón acolchadora debe ser instalada adentro de la abertura de la descarga trasera.
- Abra la protección contra la descarga y instale el desviador de contra la descarga debajo de la protección como se muestra.
- La segadora esta lista para la operación de la descarga.
- Para convertir a la operación de ensacado o de descarga, el desviador de la descarga debe ser removido y la protección contra la descarga debe estar cerrada.





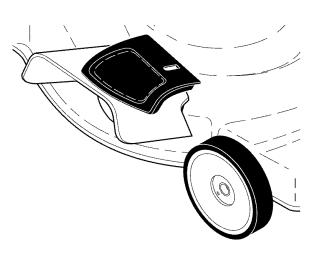

# PASOS SIMPLES DE RECORDAR CUANDO CONVIERTA SU SEGADORA PARA ACOLCHAMIENTO -


- 1. La plancha acolchadora trasera instalada.
- 2. La protección contra la descarga cerrada. PARA ENSACAMIENTO TRASERO -
- 1. La plancha acolchadora trasera removida.
- Recogedor del césped instalado.
- 3. La protección contra la descarga cerrada. PARA DESCARGA LATERAL-
- 1. La plancha acolchadora trasera instalada.
- 2. La desviador de la descarga instalada.

PRECAUCIÓN: No haga funcionar su segadora sin la placa de la acolchadora o sin el recogedor césped aprobados en su lugar. Nunca trate de operar la segadora cuando se halla removido la puerta trasera o cuando se ha removido a puerta trasera o cuando está un poco abierta.

# PARA VACIAR EL RECOGEDOR DE CÉSPED

- Levante el recogedor de césped usando el mango del bastidor.
- Remueva el recogedor de césped, con los recortes, de debajo del mango de la segadora
- 3. Vacíe los recortes de la bolsa.

**AVISO:** No arrastre la bolsa cuando la vacíe; se producirá un desgaste innecesario.

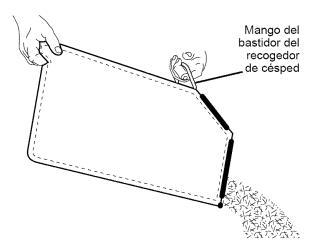

# ANTES DE HACER ARRANCAR EL MOTOR

# **AGREGUE ACEITE**

Su segadora fue enviada sin aceite en el motor. Para el tipo y el grado del aceite a utilizar, vea el "MOTOR" en la sección del Mantenimiento de este manual.

APRECAUCIÓN: NO sobrellene el motor con aceite, o fumará pesa demante del silenciador cuando lo valla a arrancar.

- 1. Asegúrese que la segadora esté nivelada.
- Remueva la varila medidora de aceite del tubo de desarga de aceite.
- Usted recibe un envase de aceite con la unidad. Vierta lentamente el envase entero de aceite en el tubo de relleno del motor.

AVISO: El terraplén inicial del aceite requiere solamente 18 onzas debido al aceite residual en el motor de la prueba de calidad de 100% del fabricante. Al cambiar el aceite puede necesitar 20 onzas.


- 4. Inserte y apriete la varilla medidora de aceite. **IMPORTANTE:**
- Revise el nivel del aceite antes de cada uso. Agregue aceite si es necesario. Llene hasta la línea de lleno en la varilla medidora de nivel.
- Cambie el aceite después de 25 horas de operación o una vez por temporada. Puede necesitar cambiar el aceite más a menudo cuando las condiciones son polvorosas o sucias. Vea "PARA CAMBIAR EL ACEITE DEL MOTOR" en la seccion de Mantenimiento de este manual.

# **AGREGUE GASOLINA**

 Llene el estanque de combustible hasta la parte inferior del cuello de relleno del estanque de gasolina. No lo llene demasiado. Use gasolina regular, sin plomo, nueva y limpia con el mínimo de 87 octanos. No mezcle el aceite con la gasolina. Para asegurar que la gasolina utilizada sea fresca compre estanques los cuales puedan ser utilizados durante los primeros 30 días.

APRECAUCIÓN: Limpie el aceite o el combustible derramado. No almacene, derrame o use gasolina cerca de una llama expuesta.

APRECAUCIÓN: Los combustibles mezclados con alcohol (conocidos como gasohol, o el uso de etanol o metanol) pueden atraer la humedad, la que conduce a la separación v formación de ácidos durante el almacenamiento. La gasolina acídica puede dañar el sistema del combustible de un motor durante el almacenamiento. Para evitar los problemas con el motor, se debe vaciar el sistema del combustible antes de guardarlo por un período de 30 días o más. Vacíe el estanque del combustible, haga arrancar el motor y hágalo funcionar hasta que las líneas del combustible y el carburador queden vacíos. La próxima temporada use combustible nuevo. Vea las Instrucciones Para El Almacenamiento para más información. Nunca use productos de limpieza para el motor o para el carburador en el estanque del combustible pues se pueden producir daños permanentes.

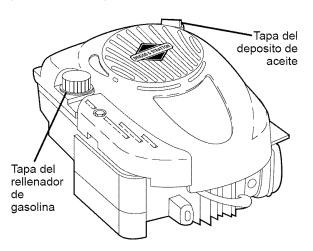

# PARA PARAR EL MOTOR

 Para parar el motor, suelte la barra de controles que exigen la presencia del operador.

# PARA HACER ARRANCAR EL MOTOR

**AVISO:** Debido a las capas protectoras del motor, una cantidad pequeña de humo puede estar presente durante el uso inicial del producto y se debe considerar normal.

- Para hacer arrancar un motor frío, empuje el cebador tres (3) veces antes de tratarlo. Empuje firmemente. Este paso normalmente no es necesario cuando se hace arrancar un motor que ya ha estado funcionando por unos cuantos minutos.
- Sujete la barra de control que exige la presencia del operador abajo en el mango y gire la llave para el arranque eléctrico en el sentido de las manillas del reloj para hacer arrancar el motor.

**IMPORTANTE:** No haga arrancar el motor más de 5 segundos continuados. Espere 5 a 10 segundos entre cada vez que trate de hacerlo arrancar.

 Para comenzar el motor sandio el arrancador de soga, siga los pasos de arriba. Cambie el uso del llave de arranque con el arrancador de soga. No permita que la soga vuelva a su posición inicial demasiado brusca mente. AVISO: En climas más fríos puede que sea necesario repetir los pasos del cebado. En climas más calurosos el cebar demasiado puede producir el ahogo y el motor no va a arrancar. Si se ahoga el motor espere unos cuantos minutos antes de tratar de hacerlo arrancar y no repita los pasos del cebado.

# **CONSEJOS PARA SEGAR**


⚠PRECAUCIÓN: No utilizar dispositivos antipaja de la hoja en la segadora ya que estos accesorios son peligrosos, pueden dañar su segadora y anular su garantía.

- Bajo ciertas condiciones, tal como césped muy alto, puede ser necesario el elevar la altura del corte para reducir el esfuerzo necesario para empujar la segadora y para evitar sobrecargar el motor, dejando montones de recortes de césped. Puede que sea necesario reducir la velocidad del recorrido y/o haga funcionar la segadora sobre el área por segunda vez.
- Para un corte muy pesado, reduzca el ancho del corte pasando parcialmente por encima del lugar anteriormente cortado y siegue lentamente.
- Para un mejor ensacado del césped y para la mayoría de las condiciones de corte, la velocidad del motor debe ajustarse a la posición de RÁPIDO.
- Los poros en los recogedores de césped de tela pueden llenarse con mugre y polvo con el uso y los recogedores recaudarán menos césped. Para evitar éste, rocíe el recogedor con la manguera de agua regularmente y déjelo secarse antes de usarlo.
- Mantenga la parte superior del motor, alrededor del arrancador, despejada y sin recortes de césped y paja. Esto ayudará el flujo del aire del motor y extenderá su duración.

# CONSEJOS PARA SEGAR Y ACOL-CHAR

IMPORTANTE: Para obtener el mejor rendimiento mantenga la caja de la segadora sin acumulacion de cesped y basura. Vea "LIMPIEZA" en la seccion de Mantenimento de este manual.

- La cuchilla acolchadora especial va a volver a cortar los recortes de césped muchas veces, y los reduce en tamaño, de modo que si se caen en el césped se van a dispesar entre éste y no se van a notar. También, el césped acolchado se va a deshacer rápidamente entregando substancias nutritivas para el césped. Siempre acolche con la velocidad del motor (cuchilla) más alta, pues así se obtendrá la mejor acción de recorte de las cuchillas.
- Evite cortar el césped cuando esté mojado.
  El césped mojado tiende a formar montones
  e interfiere con la acción de acolchado.
  La mejor hora para segar el césped es
  temprano en la tarde. A esa hora éste se ha
  secado y el área recién cortada no quedará
  expuesta al sol directo.
- Para obtener los mejores resultados, ajuste la altura del corte de la segadora de modo que ésta corte solamente el tercio superior de las hojas de césped. En el caso de que el césped haya crecido demasiado, puede ser necesario el elevar la altura del corte para reducir el esfuerzo necesario para empujar la segadora y para evitar sobrecargar el motor, dejando montones de recortes de césped. Para un césped muy pesado, reduzca el ancho del corte pasando por encima del lugar anteriormente cortado y siegue lentamente.

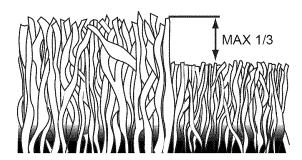

- Ciertos tipos de césped y sus condiciones pueden exigir que un área tenga que ser acolchada por segunda vez para esconder completamente los recortes. Cuando se haga el segundo corte, siegue atravesado (en forma perpendicular) a la pasada del primer corte.
- Cambie su patrón de corte de semana a semana. Siegue de norte a sur una semana y luego cambie de este a oeste la próxima semana. Esto evitará que el césped se enrede y cambie de dirección.

# **MANTENIMENTO**

	PROGRAMA DE MANTENIMIENTO		DESPUES DE CADA USO	10	CADA 25 HORAS O TEMPORADA		ANTES DEL ALMACE- NAMIENTO
	Revisar si hay Sujetadores Sueltos	<b>/</b>					/
S	Limpiar/Inspeccionar el Recogedor de Césped *	<b>V</b>	<b>V</b>				~
Ε	Controlar los Neumáticos	<b>/</b>					
G	Controlar las Ruedas Motrices ***	/					
Α	Limpiar la Segadora ****		<b>V</b>				<b>/</b>
D	Limpiar debajo la Cubierta de la Transmisión ***			<b>/</b>			
0	Revisar las Correas y las Poleas Impulsadas ***				<b>/</b>		
R	Revisar / Afilar / Cambiar la Cuchilla				<b>√</b> 3		
Α	Lubricación				<b>✓</b>		
	Limpiar / Recargar la Batería **				<b>/</b>		<b>1</b> 4
Г	Revisar el nivel del Aceite	<b>1</b> /5					
lM	Cambiar el Aceite del motor				<b>√</b> 1,2		
lo	Limpiar el Filtro de Aire				<b>√</b> 2		
lτ	Inspeccionar el Silenciador				<b>V</b>		
0	Cambiar la Bujía					<b>V</b>	
R	Cambiar el Cartucho de Papel del Filtro de Aire					<b>V</b> 2	
	Vaciar el sistema del carburante o añadir un estabilizador de carburante.						V

- \* (si viene equipado)
- 1 Cambiar más a menudo cuando se opere bajo carga pesada o en ambientes con altas temperaturas.
- \*\* Segadoras con Arranque Eléctrico 2 Dar servicio más a menudo cuando se opere en condiciones sucias o polvorosas.
- \*\*\* Segadoras con Poder Propulsor 3 Cambie las cuchillas más a menudo cuando siegue en terreno arenoso.
- \*\*\*\* Utilizar una rasqueta para limpiar 4 Cargar por 48 horas al fin de la temporada.
- debajo de la cubierta del cortacésped 5 Y después de 5 horas de funcionamiento.

# RECOMENDACIONES GENERALES

La garantía de esta segadora no cubre los artículos que han estado sujetos al abuso o a la negligencia del operador. Para recibir todo el valor de la garantía, el operador tiene que mantener la segadora según las instrucciones descritas en este manual.

Hay algunos ajustes que se tienen que hacer en forma periódica para poder mantener su unidad adecuadamente.

Al menos una vez cada estación comprobar si es necesario efectuar los ajustes descritos en las secciones de Servicio y Ajustes de este manual.

- Una vez al año, cambie la bujía, limpie o cambie el elemento del filtro de aire y revise si la cuchilla está desgastada. Una bujía nueva y un elemento del filtro de aire limpio/ nuevo aseguran la mezcla de aire-combustible adecuada y ayudan a que su motor funcione mejor y que dure más.
- Siga el programa de mantenimiento en este manual.


# **ANTES DE CADA USO**

- Revise el nivel del aceite del motor.
- · Revise si hay sujetadores sueltos.

# **LUBRICACIÓN**

Mantenga la unidad bien lubricada (vea la "TABLA DE LUBRICACIÓN").

# TABLA DE LUBRICACIÓN

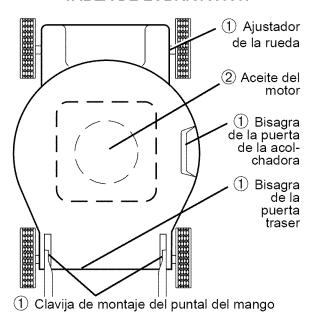

- 1 Rocie el lubricante
- ② Vea "MOTOR" en la seccion de Mantenimiento

**IMPORTANTE:** No aceite o engrase los rodamientos de la rueda de plastico. Los lubricantes viscosos atearan polvo y mugre, lo acortara la duracion de los rodamientos autolubricantes. Si cree que tienen que lubricarse, use losamente un lubricante tipo crafito, de polvo seco, en forma moderada.

### **SEGADORA**

Siempre observe las reglas de seguridad cuando haga el mantenimiento.

### **LLANTAS**

- Mantenga las llantas sin gasolina, aceite o substancias químicas para control de insectos que pueden dañar la goma.
- Evite los tocones, las piedras, las grietas profundas, los objetos afilados y otros peligros que pueden dañar a las llantas.

# RUEDAS DE IMPULSIÓN

Revise las ruedas de impulsión traseras cada vez antes de segar, para asegurarse de que se mueven libremente. Si las ruedas no giran libremente quiere decir que hay basura, recortes de césped, etc. en el área de las ruedas de impulsión y tienen que limpiarse para liberarlas. Es necesario limpiar las ruedas de impulsión; revise ambas ruedas traseras.

#### **CUIDADO DE LA CUCHILLA**

Para obtener los mejores resultados, la cuchilla de la segadora tienen que mantenerse afilada. Cambie la cuchilla doblada o dañada.

⚠PRECAUCIÓN: Usar solamente la hoja de repuesto aprobada por el fabricante de su cortacésped. Usar una hoja no aprobada por el fabricante de su cortacésped es peligroso, puede dañar su cortacésped y anular su garantía. PARA REMOVER LA CUCHILLA

- Desconecte el alambre de la bujía y póngalo en donde no pueda entrar en contacto con ésta.
- Haga descansar la segadora en su lado. Asegúrese que el filtro de aire y que el carburador queden mirando hacia arriba.
- Use un bloque de madera entre la cuchilla y la caja de la segadora para evitar que la cuchilla gire cuando se le quite el perno.

**AVISO:** Proteja sus manos con guantes y/o envuelva la cuchilla con una tela gruesa.


- Remueva el perno de la cuchilla girándolo en el sentido contrario en que giran las manillas del reloj.
- Remueva la cuchilla y los artículos de ferretería adjuntadores (el perno, la arandela de seguridad y la arandela endurecida).

AVISO: Remueva el adaptador de la cuchilla y revise el cubo interior de la ranura del adaptador de la cuchilla. La ranura tiene que estar en buenas condiciones para que funcione en forma adecuada. Cambie el adaptador si está dañado. PARA CAMBIAR LA CUCHILLA

- Ponga el adaptador de la cuchilla en el cigueñal del motor. Asegúrese que la ranura del adaptador y que el chavetero del cigueñal estén alineados.
- Ponga la cuchilla en el adaptador de ésta alineando los dos (2) agujeros en la cuchilla con las salientes elevadas en el adaptador.
- Asegúrese de que el borde de salida de la cuchilla (opuesto al borde afilado) esté hacia arriba hacia el motor.
- Instale el perno de la cuchilla con la arandela de seguridad y la arandela endurecida en el adaptador de la cuchilla y el cigueñal.
- 5. Use un bloque de madera entre la cuchilla

- y la caja de la segadora y apriete el perno de la cuchilla girándolo en el sentido en que giran las manillas del reloj.
- La torsión para apretar recomendada es de 35 – 40 pies libras.

IMPORTANTE: El perno de la cuchilla es tratado a calo. Si es necesario sustituir los pernos, sustituirlos sólo con pernos aprobados mostrados en la sección Partes de Reparación de este manual.

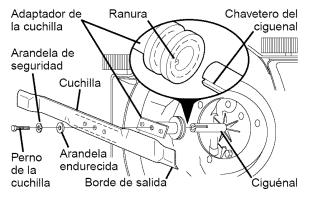

## PARA AFILAR LA CUCHILLA

AVISO: No recomendamos el afilar la cuchilla – pero si lo hace, asegúrese de que quede balanceada. Una cuchilla que no está balanceada va a producir eventualmente daño en la segadora o en el motor.

- La cuchilla puede afilarse con una lima o en una rueda rectificadora. No trate de afilarla mientras se encuentra en la segadora.
- Para revisar el balance de la cuchilla, clave un clavo en una viga o en la pared. Deje alrededor de una pulgada de un clavo recto expuesto. Ponga el agujero central de la cuchilla sobre la cabeza del clavo. Si la cuchilla está balanceada debe permanecer en la posición horizontal. Si cualquiera de los extremos de la cuchilla se mueve hacia abajo, afile el extremo pesado hasta que ésta quede balanceada.

#### RECOGEDOR DE CESPED

- El recogedor de césped puede ser rociado con el agua de la manguera pero tiene que estar seco cuando se vaya a usar.
- Revise su recogedor de césped a menudo para verificar si está dañado o deteriorado. Se va a desgastar con el uso normal. Si se necesita cambiar el recogedor, cámbielo solamente por uno que sea aprobado por el fabricante. Dé el número del modelo de la segadora cuando lo ordene.

#### CAJA DE ENGRANAJES

- Para mantener el sistema de impulsión funcionando en forma adecuada, la caja de engranajes y el área alrededor de la impulsión tienen que mantenerse limpias y sin acumulación de basura. Limpie debajo de la cubierta de la impulsión dos veces por temporada.
- La caja de engranajes se llena con lubricante hasta el nivel adecuado en la fábrica. La única vez que el lubricante necesita atención es cuando se le ha prestado servicio a la caja de engranajes.
- Si se necesita lubricante, use solamente ELF
   Multis EP00. No use substitutos.

### **MOTOR**

#### LUBRICACIÓN

Use solamente aceite de detergente de alta calidad clasificado con la clasificación SG–SL de servicio API. Seleccione la calidad de viscosidad SAE según su temperatura de operación esperada.



AVISO: A pesar de que los aceites de multiviscosidad (5W30, 10W30, etc.) mejoran el arranque en clima frío, estos aceites de multiviscosidad van ha aumentar el consumo de aceite cuando se usan en temperaturas sobre 32° F. Revise el nivel del aceite del motor más a menudo, para evitar un posible daño en el motor, debido a que no tiene suficiente aceite. Cambie el aceite después de 25 horas de operación o por lo menos una vez al año si la segadora se utiliza menos 25 horas el año. Revise el nivel del aceite del cárter antes de arrancar el motor y después de cada cinco (5) horas de uso continuado. Apriete el tapón del aceite en forma segura cada vez que revise el nivel del aceite.

# PARA CAMBIAR EL ACEITE DEL MOTOR

**AVISO**: Antes de inclinar la segadora para drenar el aceite, drene el tanque de combustible haciendo correr el motor hasta que el tanque esté vacio.

- Desconecte el alambre de la bujía y póngalo de modo que no pueda entrar en contacto con ésta.
- 2. Remueva la tapa del depósito del aceite; déjela a un lado en una superficie limpia.
- Incline la cortadora de césped por este costado tal como se muestra y purgue el aceite en un recipiente idóneo. Mueva la segadora de atrás para adelante para remover todo el aceite que se haya quedado atrapado dentro del motor.



- 4. Limpie todo el aceite derramado en la segadora y en el lado del motor.
- Echar aceite despacio en el conducto del aceite, parándose a intervalos regulares para controlar el nivel del aceite con la varilla.
- Parar de añadir aceite cuando se alcanza la señal de lleno (FULL) en la varilla. Esperar un minuto para dejar que el aceite se arregle.
- Continúe agregando cantidades pequeas de aceite y vuelva a inspeccionar la varilla medidora settles del nivel de aciete en lleno (FULL). NO sobrellene el motor con aceite, o fumará pesa demante del silenciador cuando lo valla a arrancar.

- Asegúrese de apretar la varilla medidora del aceite antes de arrancar el motor.
- 9. Vuelva a conectar el alambre de la bujía a ésta.

## **FILTRO DE AIRE**


Su motor puede sufrir averías y funcionar de manera incorrecta con un filtro del aire sucio. Sustituir el papel del cartucho una vez al año o tras 100 horas de funcionamiento, más a menudo si se utiliza en condiciones de suciedad y polvo particulares.

# PARA LIMPIAR EL FILTRO DE AIRE

- 1. Suelte el tornillo e incline la cubierta para removerlo.
- 2. Cuidadosamente, remueva el cartucho.
- 3. Límpielo golpeándolo suavemente en una superficie plana. Si está muy sucio cambie el cartucho.

APRECAUCIÓN: Los solventes de petróleo, tales como el keroseno, no se deben usar para limpiar el cartucho. Pueden producir el deterioro de éste. No aceite el cartucho. No use aire a presión para limpiarlo o secarlo.

 Instale el cartucho, luego vuelva a poner la cubierta asegurándose que las orejas estén alineadas con las ranuras en la plancha trasera. Apriete el tornillo en forma segura.

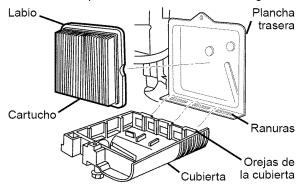

# **SILENCIADOR**

Inspeccione y cambie el silenciador si está corroído puede producir un peligro de incendio y/o daño.

#### BUJÍA

Cambie el bujía al comienzo de cada temporada de siega o después de cada 100 horas de operación, lo que suceda primero. El tipo de bujía y el ajuste de la abertura aparecen en "ES-PECIFICACIONES DEL PRODUCTO" sección de este manual.

#### **LIMPIEZA**

**IMPORTANTE:** Para obtener el mejor rendimineto, mantenga la caja de la segadora sin acumulacion de cesped y basura. Limpie la parte de abajo de su segadora despues de cada uso.

APRECAUCIÓN: Desconecte el alambre de la bujía y póngalo en donde no pueda entrar en contacto con ésta.

- Haga descansar la segadora en su lado. Asegúrese que el filtro de aire y que el carburador queden mirando hacia arriba. Limpie la parte inferior de su segadora raspándola para remover la acumulación de césped y basura.
- Limpie el motor a menudo para evitar que se acumule la basura. Un motor tapado funciona más caliente y se acorta su duración.
- Mantenga las superficies pulidas y las ruedas sin gasolina, aceite, etc.

 No recomendamos el uso de una manguera de jardín para limpiar la segadora a menos que el sistema eléctrico, el silenciador, el filtro de aire y el carburador estén tapados para evitar que les entre el agua. El agua en el motor puede acortar la duración de éste.

# LIMPIE DEBAJO DE LA CUBIERTA DE LA IMPULSIÓN

Limpie debajo de la cubierta de la impulsión por lo menos dos veces cada temporada. Raspe debajo de la cubierta con un cuchillo para masilla o con una herramienta parecida, para remover toda acumulación de césped o basura en la parte inferior de la cubierta de la impulsión.

# **SERVICIO Y AJUSTES**

ADVERTENCIA: Para evitar lesiónes serias, antes de dar calquier servico o de hacer ajustes:

- 1. Suelte la barra de control y pare el motor.
- Asegúrese que la cuchilla y que todas las partes movibles se hayan detenido completamente.
- Desconecte el alambre de la bujía y póngalo en donde no pueda entrar en contacto con ésta.

# **SEGADORA**


PARA AJUSTAR LA ALTURA DE CORTE Vea "PARA AJUSTAR LA ALTURA DE CORTE" en la sección de Operación de este manual.

# **DESVIADOR TRASERO**

Se proporciona un desviador trasero, adjunto entre las ruedas traseras de su segadora, para reducir a un mínimo la posibilidad que objetos sean lanzados hacia afuera de la parte trasera de la segadora, en la posición en donde se encuentra el operador. Si se daña el desviador debe cambiarse.


# PARA REMOVER LA CORREA DE IMPULSIÓN

- Desconecte el alambre de la bujía y póngalo en donde no pueda entrar en contacto con ésta.
- Quitar los tornillos que sujetan la tapa del mando (no mostrado); y quitar la tapa del mando del bastidor del cortacésped.

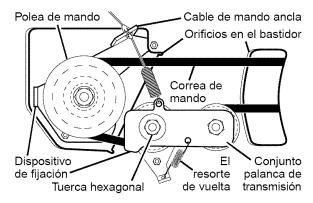

- 3. Quitar el cable del mando de la ancla, luego separar el cable y el resorte de vuelta del conjunto palanca de transmisión.
- Quitar el conjunto de la palanca de transmisión del bastidor quitando la tuerca hexagonal; luego quitar la correa de mando de la polea de mando, los dispositivos de fijación de la correa y el conjunto de la palanca de transmisión.
- Haga descansar la segadora en su lado. Asegúrese que el filtro de aire y que el carburador queden mirando hacia arriba.

 Quitar el tornillo que fija la pantalla de los escombros. Noten que la pantalla de los escombros tiene una lengüeta que se introduce en un orificio del bastidor.

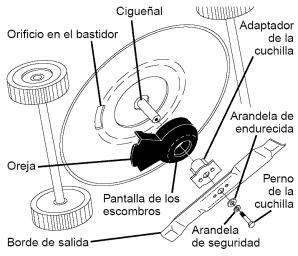

 Use un bloque de madera entre la cuchilla y la caja de la segadora para evitar que la cuchilla gire cuando se le quite el perno.

**AVISO:** Proteja sus manos con guantes y/o envuelva la cuchilla con una tela gruesa.

- 8. Remueva el perno de la cuchilla.
- Quitar la cuchilla y todos los dispositivos de fijación (perno, arandela de freno, arandela templada), adaptador de la cuchilla y pantalla de los escombros. Noten que la pantalla de los escombros tiene una lengüeta que se introduce en un orificio del bastidor.
- 10. Quitar la correa de polea del motor; eliminar la correa vieja.

# PARA CAMBIAR LA CORREA DE IMPULSIÓN

- 1. Colocar la nueva correa de polea del motor.
- Colocar la otra extremidad de la nueva correa de mando a través del orificio en el bastidor.
- 3. Volver a colocar el cortacésped en posición vertical.
- 4. Instalar la nueva correa de mando en el conjunto de la palanca de transmisión, luego alrededor de la polea de mando. Asegurarse de que la correa se halle al interior de los dispositivos de fijación de la correa.
- Volver a colocar la conjunto de la palanca de transmisión con el tuerca hexagonal precedentemente quitados.
- Haga descansar la segadora en su lado. Asegúrese que el filtro de aire y que el carburador queden mirando hacia arriba.
- Fijar otra vez la pantalla de los escombros al bastidor con la lengüeta de la pantalla de los escombros se halle en el orificio del bastidor.

- 8. Ponga la cuchilla en el adaptador de ésta alineando los dos (2) agujeros en la cuchilla con las salientes elevadas en el adaptador.
- Asegúrese de que el borde de salida de la cuchilla (opuesto al borde afilado) esté hacia arriba hacia el motor.
- Instale el perno de la cuchilla con la arandela de seguridad y la arandela endurecida en el adaptador de la cuchilla y el cigueñal.
- 11. Use un bloque de madera entre la cuchilla y la caja de la segadora y apriete el perno de la cuchilla girándolo en el sentido en que giran las manillas del reloj.
- La torsión para apretar recomendada es de 35 – 40 pies libras.


**IMPORTANTE:** El perno de la cuchilla es tratado a calo. Si es necesario sustituir los pernos, sustituirlos sólo con pernos aprobados mostrados en la sección Partes de Reparación de este manual.

- 12. Volver a colocar el cortacésped en posición vertical.
- Volver a colocar el cable del mando y el resorte de vuelta en el conjunto de la palanca de transmisión, luego fijar el cable de mando al ancla.
- 14. Volver a colocar la tapa del mando con los tornillos precedentemente quitados.
- 15. Conectar el hilo de la bujía de encendido a la bujía de encendido.

#### **PARA AJUSTAR EL MANGO**

El mango de su segadora cuenta con tres (3) posiciones de altura – ajústelo a la altura que le acomode.

- 1. Remueva la manilla y el perno portador en un lado del mango inferior.
- Al mismo tiempo que sujeta el conjunto del mango, remueva la manilla y el perno portador del lado opuesto, alinee el agujero en el mango con el agujero deseado en el puntal del mango y vuelva a montar el perno y la manilla y apriételos en forma segura.
- 3. Alinee el lado opuesto del mango con el agujero de la misma posición y asegúrelos con el perno y la manilla.

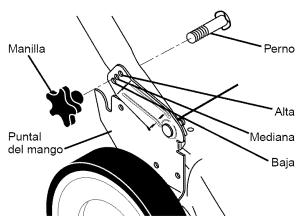

# **MOTOR**

# **VELOCIDAD DEL MOTOR**

La velocidad del motor ha sido ajustada en la fábrica. No trate de aumentar la velocidad del motor pues se pueden producir lesiones personales. Si cree que el motor está funcionando demasiado rápido o demasiado lento, lleve su segadora a mas con su centro de servicio Sears o con un otro centro de servicio cualificado.

# **CARBURADOR**

Su carburador tiene un chorro principal fijo no ajustable para controlar la mezcla. Si su motor no está funcionando en forma adecuada debido a problemas que se sospecha vienen del carburador, lleve su segadora a contacto con su centro de servicio Sears o con un otro centro de servicio cualificado para repararla y/o ajustarla.

IMPORTANTE: Nunca manipule el regulador del motor, el que ha sido ajustado en la fábrica para la velocidad del motor adecuada. Puede ser peligroso hacer funcionar el motor a una velocidad por sobre el ajuste de alta velocidad de la fábrica. Si cree que la velocidad alta regulada del motor necesita ajuste, contacto con su centro de servicio Sears o con un otro centro de servicio cualificado, el que cuenta con el equipo adecuado y la experiencia para hacer los ajustes necesarios.

# **ALMACENAMIENTO**

Inmediatamente prepare su segadora para el almacenamiento al final de cada temporada o si la unidad no se va a usar por 30 días o más.

# **SEGADORA**

Cuando se va a guardar la segadora por cierto período de tiempo, límpiela cuidadosamente, remueva toda la mugre, la grasa, las hojas, etc. Guárdela en un área limpia y seca.

- Limpie toda la segadora (Vea "LIMPIEZA" en la sección de Mantenimento de este manual).
- 2. Lubríquela según se muestra en la sección de Mantenimento de este manual.
- Asegúrese de que todas las tuercas y clavijas y todos los pernos y tornillos estén apretados en foma segura. Inspeccione las partes que se mueven para verificar si están dañadas, quebradas o desgastadas. Cámbielas si es necesario.


4. Retoque todas las superficies que estén oxidadas o con la pintura picada; use una lija antes de pintar.

## **MANGO**

Puede doblar el mango de su segadora para el almacenamiento.

- Suelte las dos (2) manillas del mango en cada lado del mango superior y permita que el mango se doble hacia detras.
- Remueva las dos (2) manillas y los pernos de cada lado del mango inferior y pivote el conjunto entero del mango hacia delante y permita le que se descanse sobre la segadora.
- Vuelva a poner las manillas y los pernos al mango inferior o a los puntales del mango para la seguridad.
- Cuando prepare su mango a partir de la posición de almacenamiento, el mango inferior nesecitara cerrarlo manualmente para la posición de sega.

**IMPORTANTE:** Cuando doble el mango para el almacenamiento o el transporte, asegúrese que lo doble según se muestra o purde dañar los cables de control.

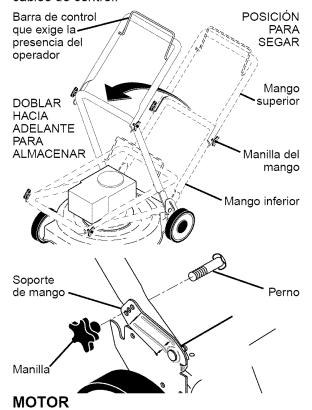

# SISTEMA DE COMBUSTIBLE

IMPORTANTE: Es importante evitar que se formen depositos de coma en partes fundamentales del sistemade combustible tales como el carburador, el filtro del combustible, la mangura del combustible o en el estanque durante el almacenamiento. Los combustibles mezclados con alcohol (conocido come gasohol o que tienen etanol o metanol) Pueden atraer humedad, lo que conduce a la separacion y a la formación de acidos durante el almacenamiento. La gasolina acida puede danar el sistema de combustible de un motor durante el perido de almacenamiento.

- Vaciar el depósito del carburante poniendo en marcha el motor y dejándolo funcionar hasta que el carburante termine y el carburador esté vacío.
- Nunca use los productos para limpieza del carburador o del motor en el estanque de combustible pues se pueden producir daños permanentes.

• Use combustible nuevo la próxima temporada. AVISO: El estabilizador de combustible es una alternativa aceptable para reducir a un mínimo la formación de depósitos de goma en el combustible durante el período de almacenamiento. Agregue estabilizador a la gasolina en el estanque de combustible o en el envase para el almacenamiento. Siempre siga la proporción de mezcla que se encuentra en el envase del estabilizador. Haga funcionar el motor por lo menos 10 minutos después de agregar el estabilizador, para permitir que este llegue al carburador. No drene la gasolina del estanque de gasolina y el carburador si se está usando estabilizador de combustible.

# **ACEITE DEL MOTOR**

Drene el aceite (con el motor caliente) y cámbielo con aceite de motor limpio. (Vea "MOTOR" en la sección de Mantenimento de este manual.)

#### **CILINDRO**

- 1. Remueva la bujía.
- 2. Vacíe una onza (29 ml) de aceite a través del agujero de la bujía en el cilindro.
- 3. Tire la manilla de arranque lentamente unas cuantas veces para distribuir el aceite.
- Vuelva a montar la nueva bujía.

#### BATERIA

Separe la batería del conector del motor y cargue la batería durante 48 horas.

#### **OTROS**

- No guarde la gasolina de una temporada a la otra.
- Cambie el envase de la gasolina si se empieza a oxidar. La oxidación y/o la mugre en su gasolina producirán problemas.
- Si es posible, guarde su unidad en un recinto cerrado y cúbrala para protegerla contra el polvo y la mugre.
- Cubra su unidad con un forro protector adecuado que no retenga la humedad. No use plástico. El plástico no puede respirar, lo que permite la formación de condensación, lo que producirá la oxidación de su unidad.

**IMPORTANTE:** Nunca cubra la segadora mientras el motor y las areas de escape todavia estan calientes.


APRECAUCIÓN: Nunca almacene la segadora con gasolina en el estanque dentro de un edificio en donde los gases pueden alcanzar una llama expuesta o una chispa. Permita que se enfríe el motor antes de almacenarla en algún recinto cerrado.

# SOLUCIÓN DE PROBLEMAS - Vea la sección apropiada en el manual amenos que esté dirigido a un centro de servico Sears.

PROBLEMA	CAUSA	CORRECCIÓN			
No arranca	<ol> <li>Filtro de aire sucio.</li> <li>Sin combustible.</li> <li>Combustible rancio.</li> </ol>	<ol> <li>Limpie/cambie el filtro de aire.</li> <li>Llene el estanque de combustible.</li> <li>Vaciar el estanque y vuelva a llenar- lo con combustible limpio y nuevo.</li> </ol>			
	4. Agua en el combustible.	4. Vaciar el estanque y vuelva a llenar- lo con combustible limpio y nuevo.			
	<ul><li>5. Alambre de la bujía desconectado.</li><li>6. Bujía mala.</li></ul>	<ul><li>5. Conecte el alambre a la bujía.</li><li>6. Cambie la bujía.</li></ul>			

SOLUCIÓN DE PROBLEMAS - Vea la sección apropiada en el manual amenos que esté dirigido a un centro de servico Sears.

PROBLEMA	CAUSA	CORRECCIÓN
No arranca (continuado)	<ul> <li>7. Cuchilla suelta o adaptador de la cuchilla quebrado.</li> <li>8. Barra de control en la posición suelta.</li> <li>9. Barra de control defectuosa.</li> <li>10. Válvula del combustible (si equipada) está en la posición OFF.</li> </ul>	<ol> <li>Apriete el perno de la cuchilla cambie el adaptador de la cuchilla.</li> <li>Presione la barra de control hacia el mango.</li> <li>Cambie la barra de control.</li> <li>Gire a la válvula del combustible a la posición ON.</li> </ol>
Falta de fuerza	<ol> <li>Cuchilla desgastada, doblada o suelta.</li> <li>Altura de las ruedas dispareja.</li> <li>Velocidad del motor lenta.</li> <li>Acumulación de césped, hojas o basura debajo de la segadora.</li> <li>Demasiado aceite en motor.</li> <li>Velocidad de recorrido demasiado rápida.</li> </ol>	<ol> <li>Eleve la altura de corte.</li> <li>Eleve la altura de corte.</li> <li>Limpie/cambie el filtro de aire.</li> <li>Limpie la parte inferior de la caja de la segadora.</li> <li>Revise el nivel del aceite.</li> <li>Corte a una velocidad de recorrido más lenta.</li> </ol>
Mal corte- disparejo	<ol> <li>Cuchilla desgastada, doblada o suelta.</li> <li>Altura de las ruedas dispareja.</li> <li>Acumulación de césped, hojas o basura debajo de la segadora.</li> </ol>	<ol> <li>Cambie la cuchilla. Apriete el perno de la cuchilla.</li> <li>Ajuste todas las ruedas a la misma altura.</li> <li>Limpie la parte inferior de la caja de la segadora.</li> </ol>
Vibración excesiva	Cuchilla desgastada, doblada o suelta.     Cigueñal del motor doblado.	<ol> <li>Cambie la cuchilla. Apriete el perno de la cuchilla.</li> <li>Póngase en contacto con su centro de servicio Sears o con un otro centro de servicio cualificado.</li> </ol>
Cordón arrancador difícil de tirar	<ol> <li>El freno del volante del motor está aplicado cuando se suelta la barra de control.</li> <li>Cigueñal del motor doblado.</li> <li>Adaptador de la cuchilla quebrado.</li> <li>La cuchilla se arrastra en el césped.</li> </ol>	<ol> <li>Presione la barra de control hacia el mango superior antes de tirar el cordón arrancador.</li> <li>Póngase en contacto con su centro de servicio Sears o con un otro centro de servicio cualificado.</li> <li>Cambie el adaptador de la cuchilla.</li> <li>Mueva la segadora a un lugar en donde el césped ha sido cortado o a una superficie firme para hacer arrancar el motor.</li> </ol>
Recogedor de césped no se llena (si viene equipado)	<ol> <li>Altura de corte demasiado baja.</li> <li>Levantamiento de la cuchilla desgastado.</li> <li>Recogedor sin ventilación de aire.</li> </ol>	<ol> <li>Eleve la altura de corte.</li> <li>Cambie las cuchillas.</li> <li>Limpie el recogedor de césped.</li> </ol>
Difícil de empujar	<ol> <li>El césped está demasiado alto o la altura de la rueda demasiado baja.</li> <li>Parte trasera de la caja/cuchilla de la segadora arrastrándose en el césped.</li> <li>Recogedor de césped demasiado lleno.</li> <li>Posición de la altura del mango no adecuada para usted.</li> </ol>	<ol> <li>Eleve la altura de corte.</li> <li>Eleve la parte trasera de la caja de la segadora (1) un lugar más alto.</li> <li>Vacíe el recogedor de césped.</li> <li>Ajuste la altura del mango de modo que le acomode.</li> </ol>
Pérdida de impulsión o retardase de la velocidad	<ol> <li>Desgaste de la correa.</li> <li>La correa está fuera de la polea.</li> <li>Cable de la impulsión usado o roto.</li> <li>El sistema de control del mecanismo impulsor "suelto".</li> </ol>	<ol> <li>Revise/cambie correa de impulsión.</li> <li>Revise/vuelva a instalar la</li> <li>Cambie el cable de la impulsión.</li> <li>Ajuste el control del mecanismo impulsor.</li> </ol>

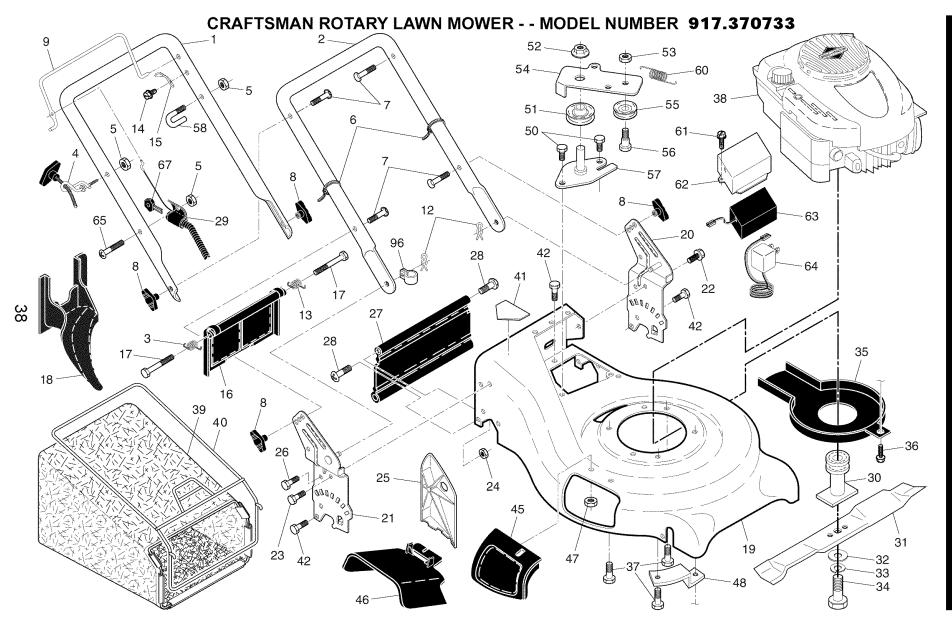

### CRAFTSMAN ROTARY LAWN MOWER - - MODEL NUMBER 917.370733

	KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
	1	194577X479	Handle, Upper	27	192876	Skirt, Rear	52	145212	Flanged Nut
	2	193664X479	Handle, Lower	28	88652	Screw, Hinge 1/4-20 x 1.25	53	155552	Locknut
	3	186053	Spring, Rear Door, RH	29	194953	Key Start Switch	54	193792X004	Idler Arm
	4	194788	Rope Guide			(Includes two Keys)	55	166043	Idler Pulley
	5	132004	Nut, Hex, with	30	189179	Blade Adapter / Pulley	56	160829	Shoulder Bolt
			Lockwasher Insert 1/4-20	31	189028	Blade, 21"	57	193315	Bracket Assembly
	6	66426	Wire, Tie	32	851074	Washer	58	182003	Clip, Wireform (Packaging)
	7	191574	Bolt, Handle 5/16-18 x 2-5/8	33	850263	Washer, Lock	60	182226	Spring, Return
	8	189713X428	Knob, Handle	34	851084	Bolt, Hex Head	61	17411318	Screw
	9	194580X428	Control Bar	35	188786	Debris Shield	62	195743	Box, Battery
	12	51793	Cotter, Hairpin	36	192325	Bolt	63	189589	Battery
	13	186052	Spring, Rear Door, LH	37	150406	Bolt, Engine	64	190097	Charger, Battery
3		750634	Screw	38		Engine, Briggs & Stratton,	65	186159	Screw
	15	850733X004	Bracket, Upstop			Model Number 125K05-	67	180331	Key
	16	185855X428	Rear Door Assembly			0659-E1 (See Breakdown)	96	197991	Clip, Cable
		184193	Bolt, Rear Door	39	403270	Grassbag		404764	Warning Decal (not shown)
		198170	Plug, Mulcher	40	194644	Frame, Grassbag		406075	Owner's Manual
	19	403269	Kit, Housing	41	404763	Danger Decal			
		192980X479	Handle Bracket Asembly, LH	42	54583	Screw	Availa	able accessori	es
		192979X479	Handle Bracket Assembly, RH	45	183058X428	Mulcher Door Assembly	(not i	ncluded with la	iwn mower):
		150078	Screw, Hex Washer Head	46	169699X428	Discharge Guard			
		163183	Bolt, Hex Head 5/16-18 x 5/8	47	88349	Nut, Hex		71 33623	Gas Can
	24	73800500	Nut, Hex, with	48	188839X004	Mounting Bracket,			(2.5 Gallon Container)
			Lockwasher Insert 5/16-18			Debris Shield		71 33500	Fuel Stabilizer
		161333	Baffle, Side		57808	Screw		71 33000	SAE 30W Oil
	26	163409	Screw #12 x 5/8	51	193791	Pulley, Idler			(20 Ounce Bottle)

**NOTE:** All component dimensions given in U.S. inches. 1 inch = 25.4 mm. **IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your lawn mower and void your warranty.


### CRAFTSMAN ROTARY LAWN MOWER - - MODEL NUMBER 917.370733 - 33 (37 36 11 31 -52 -58 13 -28 22


### CRAFTSMAN ROTARY LAWN MOWER - - MODEL NUMBER 917.370733


PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
195989	Drive Control Assembly (Includes Cable)	28	12000058	E-Ring 7/16
				Cover, Dust, Wheel
	· · · · · · · · · · · · · · · · · · ·			Nut, Hex
				Pawl
195744	·		194231X460	Wheel & Tire Assembly, Rear 8 x 1-3/4
181698	Screw	33	83923	Nut, Flangelock 3/8-16
400235X479	Mounting Bracket	34	175103	Gear
184987	Cap, Bottom	35	175105	Retainer, Drive, LH
196002	Cable, Drive	36	175104	Disc, Drive
194212	Decal, Drive Control Operation	37	184172	Seal, Friction
188291	Spring, Torsion	38	175102	Retainer, Drive, RH
187653	Screw	40	400246X460	Wheel & Tire Assembly, Front 8 x 1-3/4
193354	Gear Case Assembly, Complete	41	188330	Pinion Assembly, RH
193443	Pulley, Drive	43	188331	Pinion Assembly, LH
197235	Kit, Wheel Adjuster Assembly, RH	44	183688	V-Belt
	(Includes Knob and Bearing)	47	67725	Washer
197234	Kit, Wheel Adjuster Assembly, LH	51	187530 *	Case, Lower
	(Includes Knob and Bearing)	52	187531 *	Case, Upper
166785	Nut, Hex	53	187532	Gear, 24 Teeth
168360X004	Spring, Selector	54	187533	Shaft, Input
701037	Knob, Selector Spring	55	183505	Wire, Formed
160835X007	Bracket, Wheel Adjusting	56	183506	Bearing, Ball
160828	Bolt, Shoulder, Hex Head	57	183508	Seal, Output Shaft
169911	Bearing, Ball	58	183509	Washer
186578X004	Axle Arm Assembly, RH	59	183511	Bushing
186577X004	Axle Arm Assembly, LH	60	197385	Shaft, Output
199775X428	Cover Drive	61	183513	Screw
750634	Screw, Threaded, Rolled #10-25 x .50	62	183514	Seal, Input Shaft
183901	Spacer			
	NO.  195989 195745 187353 188281 195744 181698 400235X479 184987 196002 194212 188291 187653 193354 193443 197235  197234  166785 168360X004 701037 160828 169911 186578X004 186577X004 199775X428 750634	NO. DESCRIPTION  195989 Drive Control Assembly (Includes Cable) 195745 Cover, Top 187353 Pulley 188281 Lever, Drive Control 195744 Cover, Bottom 181698 Screw 400235X479 Mounting Bracket 184987 Cap, Bottom 196002 Cable, Drive 194212 Decal, Drive Control Operation 188291 Spring, Torsion 187653 Screw 193354 Gear Case Assembly, Complete 193443 Pulley, Drive 197235 Kit, Wheel Adjuster Assembly, RH (Includes Knob and Bearing) 197234 Kit, Wheel Adjuster Assembly, LH (Includes Knob and Bearing) 166785 Nut, Hex 168360X004 Spring, Selector 701037 Knob, Selector Spring 160828 Bolt, Shoulder, Hex Head 169911 Bearing, Ball 186578X004 Axle Arm Assembly, LH 199775X428 Cover Drive 750634 Screw, Threaded, Rolled #10-25 x .50	NO.         DESCRIPTION         NO.           195989         Drive Control Assembly (Includes Cable)         28           195745         Cover, Top         29           187353         Pulley         30           188281         Lever, Drive Control         31           195744         Cover, Bottom         32           181698         Screw         33           400235X479         Mounting Bracket         34           184987         Cap, Bottom         35           196002         Cable, Drive         36           194212         Decal, Drive Control Operation         37           188291         Spring, Torsion         38           187653         Screw         40           193354         Gear Case Assembly, Complete         41           193443         Pulley, Drive         43           197235         Kit, Wheel Adjuster Assembly, RH         44           (Includes Knob and Bearing)         47           197234         Kit, Wheel Adjuster Assembly, LH         51           (Includes Knob and Bearing)         52           166785         Nut, Hex         53           168360X004         Spring, Selector         54	NO.         DESCRIPTION         NO.         NO.           195989         Drive Control Assembly (Includes Cable)         28         12000058           195745         Cover, Top         29         189403           187353         Pulley         30         73800400           188281         Lever, Drive Control         31         175098           195744         Cover, Bottom         32         194231X460           181698         Screw         33         83923           400235X479         Mounting Bracket         34         175103           184987         Cap, Bottom         35         175105           196002         Cable, Drive         36         175104           194212         Decal, Drive Control Operation         37         184172           188291         Spring, Torsion         38         175102           187653         Screw         40         400246X460           193354         Gear Case Assembly, Complete         41         188330           197235         Kit, Wheel Adjuster Assembly, RH         44         183688           (Includes Knob and Bearing)         47         67725           197234         Kit, Wheel Adjuster Assembly, LH         51 </td

<sup>\*</sup> Use Dow Corning #709 to reseal Gear Case Halves.

**NOTE:** All component dimensions given in U.S. inches. 1 inch = 25.4 mm. **IMPORTANT:** Use only Original Equipment Manufacturer (O.E.M.) replacement parts. Failure to do so could be hazardous, damage your lawn mower and void your warranty.

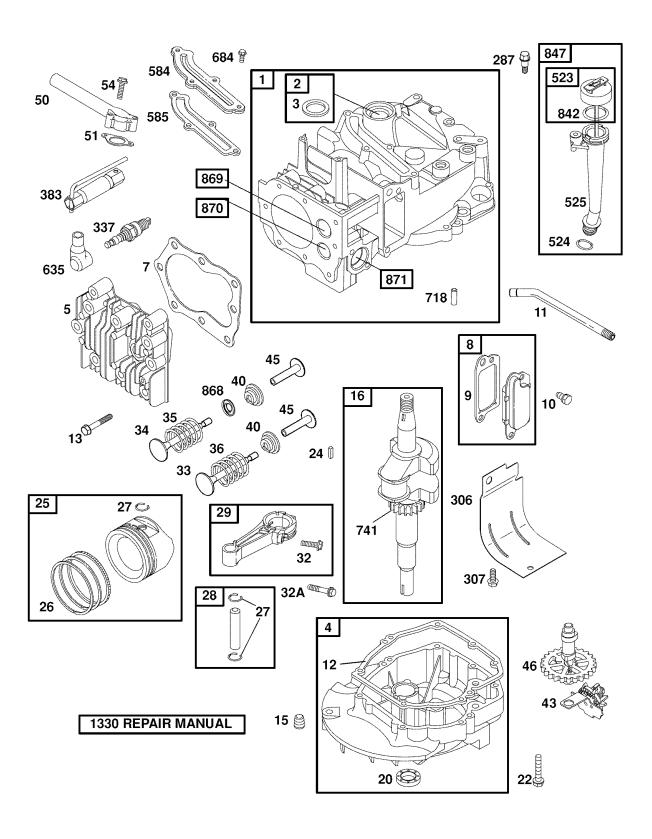

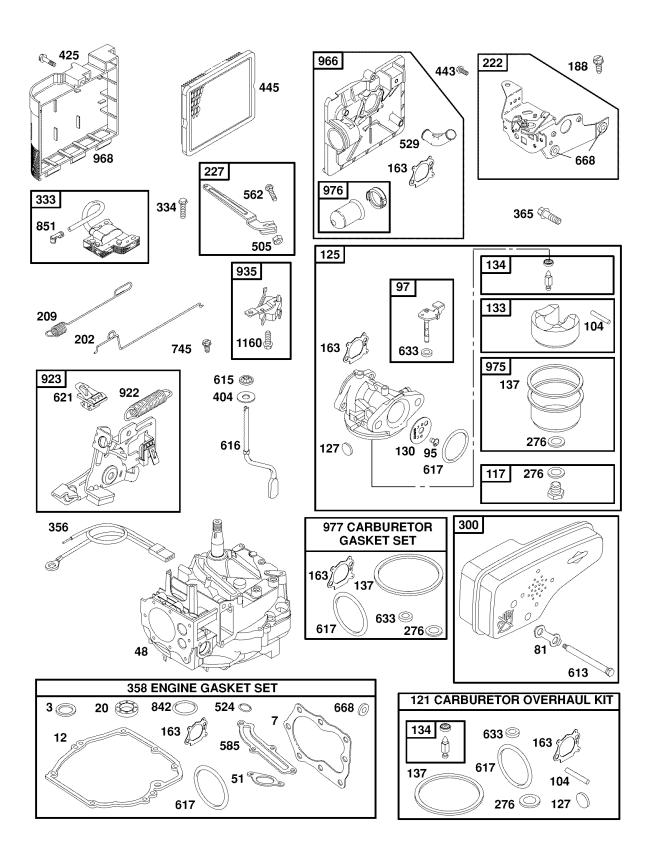

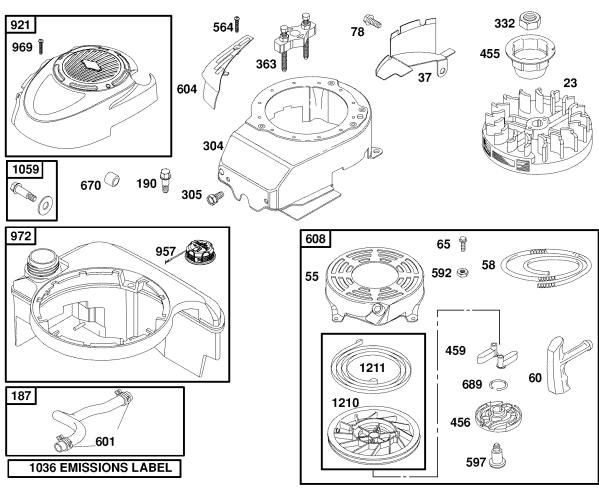

KEY NO. 1 2 3 4 5 7 8 9 10 11 12 13 15 16 20 22 23 24 25	PART NO. 697322 399269 299819s 493279 691160 692249 695250 696125 691125 691781 692232 690912 691680 691450 399781s 691092 691987 222698s 790359 791326 790360 791324 691866	 DESCRIPTION Cylinder Assembly Kit-Bushing/Seal Seal-Oil (Magneto Side) Sump-Engine Head-Cylinder Gasket-Cylinder Head Breather Assembly Gasket-Breather Screw (Breather Assembly) Tube-Breather Gasket-Crankcase Screw (Cylinder Head) Plug-Oil Drain Crankshaft Seal-Oil (PTO Side) Screw (Engine Sump) Flywheel Key-Flywheel Piston Assembly (Standard) Piston Assembly (.020" Oversize) Ring Set (Standard) Ring Set (.020" Oversize) Lock-Piston Pin	<b>KEY NO</b> . 32A 33 34 35 36 37 40 43 45 46 48 50 51 54 55 58 60 65 78 81 95 97 104 117	NO. 695759 262651s 262652s 691270 691270 694086 692194 691997 690548 691449 498829 497465	DESCRIPTION  Screw (Connecting Rod)  Valve-Exhaust  Valve-Intake  Spring-Valve (Intake)  Spring-Valve (Exhaust)  Guard-Flywheel  Retainer-Valve  Slinger-Governor/Oil  Tappet-Valve  Camshaft  Short Block  Manifold-Intake  Gasket-Intake  Screw (Intake Manifold)  Housing-Rewind Starter  Rope-Starter (Cut to Fit)  Grip-Starter Rope  Screw (Rewind Starter)  Screw (Flywheel Guard)  Lock-Muffler Screw  Screw (Throttle Valve)  Shaft-Throttle  Pin-Float Hinge  Jet-Main (Standard)
26		Ring Set (Standard)	97		Shaft-Throttle
27		· ,			
28	499423	Pin-Piston	121	498260	Kit-Carburetor Overhaul
29	499424	Rod-Connecting	125	790821	Carburetor
32	691664	Screw (Connecting Rod)	127	694468 Ø	Plug-Welch
J2	081004	4	.4	034400 Ø	i iug-vveicii

NO.         NO.         DESCRIPTION         NO.         NO.         DESCRIPTION           130         398186 / Valve-Throttle         633 891321 (2) \$40 × 1 × 1 × 1 × 1 × 1 × 1 × 1 × 1 × 1 ×	KEY	PART			KF	: V	PART		_
130         698564         Valve-Throttle         633         691321         ∅‡         Seal-Throttle Shaft           133         388188         Ø Valve-Needle/Seat         665         665388         Screw (Starter Gear Cover)           137         693981         ؇         Gasket-Float Bowl         688         493823         Spacer (Includes 2)           183         729263s         O‡         Gasket-Air Cleaner         670         68224         Spacer (Includes 2)           188         693399         Screw (Control Bracket)         699         691855         Spring-Governor           190         699056         Spring-Governor         741         790345         Gear-Timing           202         791128         Bracket-Control         742         93941         Retainer-E Ring           277         271716         ؇         Sealing Washer         783         691298         Gear-Pinion           287         69090         Screw (Dipstick Tube)         783         691918         Screw (Freather Cover)           276         271716         ؇         Sealing Washer         783         691294         Screw (Freather Cover)           287         69040         Screw (Dipstick Tube)         783         69128         <				DESCRIPTION					DESCRIPTION
133   398187								ر	
1343   389188								~ +	
137 693981			Ø						
163         272653s - O² Gasket-Air Cleaner         670         692294         Spacer-Fuel Tank           187         791783         Line-Fuel (Molded)         684         690345         Screw (Breather Cover)           188         693399         Screw (Control Bracket)         689         691855         Spring-Friction           190         690965         Spring-Governor         718         690959         Pin-Locating           209         699056         Spring-Governor         741         790345         Gear-Timing           227         690783         Control Lever-Governor         745         691648         Screw (Brake)           276         271716         Øt Sealing Washer         783         691289         Gear-Pinion           287         69040         Screw (Dipstick Tube)         783         691289         Gear-Pinion           287         69040         Screw (Blower Housing)         801         690782         Cap-Drive           280         691108         Screw (Cylinder Shield)         803         699526         Cap-Drive           306         690450         Shield-Cylinder         802         695267         Cap-End           409041         Arreacy (Krater Motor)         871         690346 <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>•</td> <td></td>								•	
187 791783         Line-Fuel (Molded)         684         890345         Screw (Breather Cover)           188 69339         Screw (Control Bracket)         689         681855         Spring-Friction           190 690940         Screw (Fuel Tank)         697         691127         Screw (Drive Cap)           202 691829         Link-Mechanical Governor         741         790345         Gear-Timing           222 791716         Bracket-Control         742         93941         Retainer-E Ring           276 271716         Ot Sealing Washer         783         691268         Screw (Brake)           276 809040         Screw (Dipstick Tube)         783A         69118         Gear-Pinion           300 692038         Muffler         784         892341         Cover-Starter Gear           301 699108         Screw (Blower Housing)         801         8905267         Cap-Drive           303 69550         Motor-Starter         802         695267         Cap-Drive           455 791960         Cup-Flywheel         811         493880s         Harmas-Wiring           333 790817         Armature-Magneto         889         691155         Seat-Valve (Intake)           334 69566         Puly-Spark         Wire-Stop         89731         Seav-V									
188 (a)3399         Screw (Control Bracket)         689         6911257         Spring-Friction           190 (a) 690940         Screw (Fuel Tank)         697         691127         Screw (Chruc Cap)           202 (a) 691829         Link-Mechanical Governor         718         690959         PinL-Loading           207 (a) 791128         Bracket-Control         742         93941         Retainer-E Ring           227 (a) 71716         Øt Sealing Washer         783         691269         Gear-Timing           287 (a) 690940         Screw (Dipstick Tube)         783, 691648         Screw (Brake)           304 (a) 83293         Housing-Blower         783         691269         Gear-Pinion           305 (a) 691108         Screw ((Blower Housing)         801         690782         Cap-Drive           307 (a) 690345         Screw ((Cylinder Shield)         803         695267         Cap-End           310 (a) 69237         Screw (Starter Motor)         847         69124         Seal-Valve (Enhaust)           310 (a) 69238         Nut (Flywheel)         886         697338         Seal-Valve (Enhaust)           310 (a) 69237         Namature-Magneto         870         690380         Seal-Valve (Enhaust)           31 (a) 690628         Nut (Flywheel)         S			~ 7						
190         690404         Screw (Fuel Tank)         697         691127         Screw (Drive Cap)           202         691829         Link-Mechanical Governor         718         690959         Pin-Locating           202         691829         Spring-Governor         741         790345         Gear-Timing           276         271716         Dt Sealing Washer         783         691268         Screw (Brake)           276         271716         Dt Sealing Washer         783         691268         Gear-Pinion           300         692038         Muffler         784         692341         Cover-Starter Gear           301         691108         Screw (Blower Housing)         801         69058267         Cap-Drive           306         691108         Screw (Cylinder         802         695267         Cap-End           307         690345         Screw (Cylinder Shield)         803         695266         Housing-Starter           308         695250         Motor-Starter         842         881031         Seal-O Ring (Dipstick Tube)           310         692327         Screw (Karter Motor)         871         692047         Assembly-Dipstick/Tube           310         692321         Avashila         Scr									
202         691829         Link-Mechanical Governor         718         690956         Pin-Locating           202         791128         Bracket-Control         742         39341         Retainer-E Ring           227         6271716         Øther Sealing Washer         783         691269         Gear-Pinion           287         690940         Screw (Dipstick Tube)         783         691289         Gear-Pinion           306         692038         Muffler         784         692341         Cover-Starter Gear           304         433293         Housing-Blower         789         695247         Cap-Drive           305         691108         Screw (Blower Housing)         801         690782         Cap-Drive           306         690450         Shield-Cylinder         802         695267         Cap-End           307         690345         Screw (Cylinder Shield)         803         695266         Housing-Starter           307         690345         Screw (Starter Motor)         847         692047         Assembly-Dipstick Tube)           308         69550         Motor-Starter         842         691031         Seal-O Ring (Dipstick Tube)           310         69262         Nut (Flywheel)         8									
209         699056         Spring-Governor         741         790345         Gear-Timing           227         791128         Bracket-Control         742         39341         Retainer-E Ring           276         690783         Control Lever-Governor         745         691648         Screw (Brake)           276         690940         Screw (Dipstick Tube)         783         691289         Gear-Pinion           300         692036         Muffler         784         692341         Cover-Starter Gear           304         493233         Housing-Blower         789         896547         Harness-Wiring           305         691108         Screw (Cylinder         802         695267         Cap-Drive           306         690345         Screw (Cylinder Shield)         803         695266         Housing-Starter           309         695550         Motor-Starter         842         691031         Seal-O Ring (Dipstick Tube)           455         791960         Cup-Flywheel         851         493880s         Terminal-Spark Plug           332         790817         Armature-Magneto         870         690330         Seat-Valve (Intake)           356         692390         Wire-Stop         870									
222         791128         Bracket-Control         742         89341         Retainer-E Ring           276         29783         Control Lever-Governor         745         691648         Screw (Brake)           276         271716         ؇ Sealing Washer         783         691299         Gear-Pinion           809         Mulfler         784         692341         Cover-Starter Gear           304         493293         Housing-Blower         789         696547         Harness-Wiring           305         691108         Screw (Blower Housing)         801         690782         Cap-Drive           306         690450         Shield-Cylinder         802         695267         Cap-End           307         690345         Screw (Glower Housing)         803         695266         Housing-Starter           307         690345         Screw (Clylinder Shield)         803         695266         Housing-Starter           310         692327         Screw (Starter Motor)         847         691031         Sea-I-Valive (Intake)           333         790817         Armature-Magneto         869         691155         Seal-Valive (Intake)           333         691061         Screw (Armature Magneto)         870									
2276         690783         Control Lever-Governor         745         691648         Screw (Brake)           276         271716         ؇ Sealing Washer         783         691269         Gear-Pinion           300         692038         Muffler         784         692341         Cover-Starter Gear           304         493239         Housing-Blower         789         696547         Cap-Drive           306         691108         Screw (Blower Housing)         801         690782         Cap-End           307         690345         Screw (Cylinder         802         695267         Cap-End           309         690550         Motor-Starter         842         691031         Seal-O Ring (Dipstick Tube)           455         791960         Cup-Flywheel         851         493880s         Ferminal-Spark Plug           332         690662         Nut (Flywheel)         868         691335         Seal-Valve (Exhaust)           334         790817         Armature-Magneto         869         691155         Seat-Valve (Exhaust)           334         790817         Armature-Magneto         870         690380         Seat-Valve (Exhaust)           335         190817         Armature-Stop         871									
287         890940         Screw [Dipstick Tube)         783A 691918         Gear-Pinion           300         692038         Muffler         784 692341         Cover-Starter Gear           304         493293         Housing-Blower         789 896547         Harness-Wiring           306         690450         Shield-Cylinder         802 695267         Cap-Drive           307         690345         Screw (Cylinder Shield)         803 695266         Housing-Starter           309         695550         Motor-Starter         842 691031         • Seal-O Ring (Dipstick Tube)           309         695550         Motor-Starter         842 691031         • Seal-Valve           455         791960         Cup-Flywheel         851 493880s         Terminal-Spark Plug           332         690662         Nut (Flywheel)         866 697338         Seal-Valve (Exhaust)           334         691061         Screw (Armature Magneto)         870 690330         Seat-Valve (Exhaust)           334         802529         Plug-Spark         871 262001         Bushing-Guide (Exhaust)           356         692390         Wire-Stop         63709         Bushing-Guide (Exhaust)           365         692291         Wrench-Spark Plug         92 691831	227	690783		Control Lever-Governor	74	5	691648		
2006   892038   Muffler   784   692541   Cover-Starter Gear	276	271716	؇	Sealing Washer	78	3	691269		Gear-Pinion
1904   493293   Housing-Blower   789   696547   Harness-Wiring   305   690450   Shield-Cylinder   802   695267   Cap-End   Cap-End   Cap-End   Housing-Starter   307   690345   Screw (Cylinder Shield)   803   695266   Housing-Starter   307   690345   Screw (Starter Motor)   847   692047   Assembly-Dipstick/Tube   351   4938805   Terminal-Spark Plug   332   690662   Nut (Flywheel)   868   697338   Sael-Valve (Intake)   333   790817   Armature-Magneto   870   690380   Seat-Valve (Intake)   334   691061   Screw (Armature Magneto)   870   690380   Seat-Valve (Exhaust)   336   692390   Wire-Stop   63709   Bushing-Guide (Exhaust)   358   497316   Engine Gasket Set   21   688587   Cover-Blower Housing   358   497316   Engine Gasket Set   921   689587   Cover-Blower Housing   358   497316   Engine Gasket Set   921   690870   Screw (Carburetor)   923   691944   Brake   692523   Screw (Carburetor)   923   691944   Brake   692523   Screw (Air Cleaner Cover)   443   692523   Screw (Air Cleaner Base)   966   792040   Base-Air Cleaner Primer   445   491588   Filter-Air Cleaner Cartridge   988   692299   Pale-Pawl Friction   996   690700   Screw (Blower Cover)   494147   Drive-Starter   972   699374   Tank-Fuel   509   691251   Nut (Gov. Control Lever)   975   493640   Bowl-Float   Trimer-Carburetor   975   493640   Bowl-Float   Trimer-Carburetor   976   493640   Bowl-Float   Primer-Carburetor   691251   Nut (Gov. Control Lever)   975   493640   Bowl-Float   Primer-Carburetor   974   498241   Set-Carburetor   Gasket   1308   792156   Label-Emissions   1309   130	287	690940		Screw (Dipstick Tube)	78	3А	691918		Gear-Pinion
305         691108         Screw (Blower Housing)         801         690782         Cap-Drive           306         690450         Shield-Cylinder         802         695267         Cap-End           307         690345         Screw (Cylinder Shield)         803         695266         Housing-Starter           309         695550         Motor-Starter         842         691031         Seal-O Ring (Dipstick Tube)           455         791960         Cup-Flywheel         851         493880s         Terminal-Spark Plug           332         690862         Nut (Flywheel)         868         697338         Seal-Valve           334         691061         Screw (Armature-Magneto)         870         690380         Seat-Valve (Intake)           337         8025928         Plug-Spark         871         262001         Bushing-Guide (Intake)           337         8025928         Plug-Spark         871         262001         Bushing-Guide (Intake)           338         893061         Engine Gasket Set         921         698587         Cover-Blower Housing           363         19069         Flywheel Puller         922         691831         Spring-Brake           833         89838s         Wrench-Spark Plug		692038		Muffler	78	4	692341		Cover-Starter Gear
306         690450         Screw (Cylinder Shield)         803         695266         Housing-Starter           307         690345         Screw (Cylinder Shield)         803         695266         Housing-Starter           310         695550         Motor-Starter         842         691031         Seal-ORing (Dipstick Tube)           310         692327         Screw (Starter Motor)         847         692047         Assembly-Dipstick/Tube           455         791960         Cup-Flywheel         851         493880s         Terminal-Spark Plug           333         690862         Nut (Flywheel)         868         697338         Seal-Valve (Intake)           333         790817         Armature-Magneto         869         691155         Seat-Valve (Intake)           334         691061         Screw (Armature Magneto)         870         690380         Seat-Valve (Exhaust)           356         691373         Se2529         Plug-Spark         871         262001         Bushing-Guide (Exhaust)           358         497316         Engine Gasket Set         921         698587         Cover-Blower Housing           356         692524         Screw (Carburetor)         923         691831         Spring-Brake           35		493293					696547		Harness-Wiring
307         690345         Screw (Cylinder Shield)         803         695266         Housing-Starter           309         695550         Motor-Starter         842         691031         Seal-O Ring (Dipstick Tube)           455         791960         Cup-Flywheel         851         493880s         Terminal-Spark Plug           332         690662         Nut (Flywheel)         868         697338         Seal-Valve (Intake)           334         691061         Screw (Armature Magneto)         870         690380         Seal-Valve (Intake)           334         691061         Screw (Armature Magneto)         870         690380         Seal-Valve (Intake)           334         691061         Screw (Armature Magneto)         870         690380         Seal-Valve (Intake)           335         892592         Plug-Spark         871         262001         Bushing-Guide (Intake)           358         497316         Engine Gasket Set         921         698587         Cover-Blower Housing           358         497316         Engine Gasket Set         921         698587         Cover-Blower Housing           363         19089         Flywheel Puller         922         691831         Spring-Brake           363         190									
309         695550         Motor-Starter         842         691031         • Seal-O Ring (Dipstick Tube)           310         692327         Screw (Starter Motor)         847         692047         Assembly-Dipstick/Tube           455         791960         Cup-Flywheel         851         493880s         Seal-Valve           332         690662         Nut (Flywheel)         868         697338         Seal-Valve (Exhaust)           333         790817         Armature-Magneto         870         690380         Seat-Valve (Exhaust)           337         802592s         Plug-Spark         871         262001         Bushing-Guide (Exhaust)           356         692390         Wire-Stop         870         690380         Seat-Valve (Exhaust)           363         19069         Flywheel Puller         922         691831         Spring-Brake           363         19069         Flywheel Puller         922         691831         Spring-Brake           363         19069         Flywheel Puller         923         691994         Brake           365         692272         Washer (Governor Crank)         933         691325         Spline-Starter           425         690070         Screw (Air Cleaner Cartridge				-					
310         692327         Screw (Starter Motor)         847         692047         Assembly-Dipstick/Tube           455         791960         Cup-Flywheel         851         493880s         Terminal-Spark Plug           332         690662         Nut (Flywheel)         868         697333         Seal-Valve           333         790817         Armature-Magneto         869         691155         Seat-Valve (Intake)           334         691061         Screw (Armature Magneto)         870         690380         Seat-Valve (Intake)           337         802592         Plug-Spark         871         262001         Bushing-Guide (Exhaust)           356         692390         Wire-Stop         63709         Bushing-Guide (Exhaust)           358         497316         Engine Gasket Set         921         699587         Cover-Blower Housing           358         499316         Engine Gasket Set         921         6998587         Cover-Blower Housing           363         19069         Flywheel Puller         922         691831         Spring-Brake           383         88838s         Wrench-Spark Plug         935         499421         Switch-Interlock           404         690272         Washer (Governor Crank)									
455         791960         Cup-Flywheel         851         493880s         Terminal-Spark Plug           332         690662         Nut (Flywheel)         868         697338         Seal-Valve           333         790817         Armature-Magneto         869         691155         Seat-Valve ((Intake)           334         691061         Screw (Armature Magneto)         870         690380         Seat-Valve (Exhaust)           356         69292s         Plug-Spark         871         262001         Bushing-Guide ((Intake)           358         497316         Engine Gasket Set         921         698587         Cover-Blower Housing           363         19069         Flywheel Puller         922         691831         Spring-Brake           365         692524         Screw (Carburetor)         923         691831         Spring-Brake           383         89838s         Wrench-Spark Plug         935         499421         Switch-Interlock           404         690272         Washer (Governor Crank)         937         691325         Spline-Starter           425         690670         Screw (Air Cleaner Cover)         957         699855         Cap-Fuel Tank           445         692238         Fliter-Air Cl								•	
332         690662         Nut (Flywheel)         868         697338         Seal-Valve           334         691061         Screw (Armature-Magneto)         870         690380         Seat-Valve (Exhaust)           337         802592s         Plug-Spark         871         262001         Bushing-Guide (Exhaust)           356         692390         Wire-Stop         63709         Bushing-Guide (Intake)           365         897316         Engine Gasket Set         921         698587         Cover-Blower Housing           363         19069         Flywheel Puller         922         691831         Spring-Brake           365         692524         Screw (Carburetor)         923         691994         Brake           365         692524         Screw (Carburetor)         937         691325         Spline-Starter           425         690670         Screw (Air Cleaner Cover)         957         699885         Cap-Fuel Tank           445         491588s         Filter-Air Cleaner Cartridge         968         692298         Cover-Air Cleaner Primer           456         692299         Plate-Pawl Friction         968         692700         Screw (Blower Cover)           459         281505s         Pawl-Ratchet									
333         790817         Armature-Magneto         869         691155         Seat-Valve (Intake)           334         691061         Screw (Armature Magneto)         870         690380         Seat-Valve (Exhaust)           356         692390         Wire-Stop         63709         Bushing-Guide (Exhaust)           358         497316         Engine Gasket Set         921         698587         Cover-Blower Housing           363         19069         Flywheel Puller         922         691831         Spring-Brake           365         692524         Screw (Carburetor)         923         691994         Brake           383         89838s         Wrench-Spark Plug         935         499421         Switch-Interlock           404         690272         Washer (Governor Crank)         937         691325         Spline-Starter           425         690670         Screw (Air Cleaner Base)         966         792040         Base-Air Cleaner Primer           445         690573         Screw (Air Cleaner Caver)         976         6988         692298         Cover-Air Cleaner           456         692299         Plate-Pawl Friction         968         692298         Cover-Air Cleaner           459         281251									
334         691061         Screw (Armature Magneto)         870         690380         Seat-Valve (Exhaust)           337         802592s         Plug-Spark         871         262001         Bushing-Guide (Exhaust)           356         692390         Wire-Stop         63709         Bushing-Guide (Exhaust)           363         19069         Flywheel Puller         922         691831         Spring-Brake           365         692524         Screw (Carburetor)         923         691994         Brake           404         690272         Washer (Governor Crank)         937         691325         Spline-Starter           425         690670         Screw (Air Cleaner Cover)         957         69985         Cap-Fuel Tank           443         692252         Screw (Air Cleaner Cover)         957         69985         Cap-Fuel Tank           445         491588s         Filter-Air Cleaner Cartridge         968         692298         Cover-Air Cleaner           450         891251         Nut (Gov. Control Lever)         975         493640         Bowl-Float           510         494147         Drive-Starter         976         496115         Primer-Carburetor           523         499621         Seal-Dipstick Tube									
337         802592s         Plug-Spark         871         262001         Bushing-Guide (Exhaust)           356         692390         Wire-Stop         63709         Bushing-Guide (Intake)           358         497316         Engine Gasket Set         921         698587         Cover-Blower Housing           363         19069         Flywheel Puller         922         691831         Spring-Brake           365         692524         Screw (Carburetor)         923         691994         Brake           383         89838s         Wrench-Spark Plug         935         499421         Switch-Interlock           404         690272         Washer (Governor Crank)         937         691325         Spline-Starter           425         690670         Screw (Air Cleaner Base)         966         792040         Base-Air Cleaner Primer           445         491588s         Filter-Air Cleaner Base)         966         792040         Base-Air Cleaner Primer           456         692299         Palate-Pawl Friction         968         692298         Cover-Air Cleaner Primer           456         692299         Palate-Pawl Friction         972         698374         Tank-Fuel           505         691251         Nut (Gov. Contro									
356         692390         Wire-Stop         63709         Bushing-Guide (Intake)           358         497316         Engine Gasket Set         921         698587         Cover-Blower Housing           363         19069         Flywheel Puller         922         691831         Spring-Brake           365         692524         Screw (Carburetor)         923         691994         Brake           383         89838s         Wrench-Spark Plug         935         499421         Switch-Interlock           404         690272         Washer (Governor Crank)         937         691325         Spline-Starter           425         690670         Screw (Air Cleaner Cover)         957         699985         Cap-Fuel Tank           443         692293         Screw (Air Cleaner Base)         966         792040         Base-Air Cleaner Primer           445         491588s         Filter-Air Cleaner Cartridge         968         692298         Cover-Air Cleaner           456         692299         Plate-Pawl Friction         969         690700         Screw (Blower Cover)           459         281505s         Pawl-Ratchet         972         699374         Tank-Fuel           505         691251         Nut (Gov. Control Lever) </td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>									
358         497316         Engine Gasket Set         921         698587         Cover-Blower Housing           363         19069         Flywheel Puller         922         691831         Spring-Brake           365         692524         Screw (Carburetor)         923         691994         Brake           383         89838s         Wrench-Spark Plug         935         499421         Switch-Interlock           404         690272         Washer (Governor Crank)         937         691325         Spline-Starter           425         690670         Screw (Air Cleaner Base)         966         792040         Base-Air Cleaner Primer           443         692523         Screw (Air Cleaner Base)         968         692298         Cover-Air Cleaner Primer           445         491588s         Filter-Air Cleaner Cartridge         968         692298         Cover-Air Cleaner           456         692299         Plate-Pawl Friction         969         690700         Screw (Blower Cover)           459         281505s         Pawl-Ratchet         972         699374         Tank-Fuel           505         691251         Nut (Gov. Control Lever)         975         493640         Bowl-Float           510         494147					87	1			
363         19069         Flywheel Puller         922         691831         Spring-Brake           365         692524         Screw (Carburetor)         923         691994         Brake           383         89838s         Wrench-Spark Plug         935         499421         Switch-Interlock           404         690272         Washer (Governor Crank)         937         691325         Spline-Starter           425         690670         Screw (Air Cleaner Base)         966         792040         Base-Air Cleaner Primer           445         491588s         Filter-Air Cleaner Cartridge         968         692298         Cover-Air Cleaner           445         491588s         Filter-Air Cleaner Cartridge         968         692298         Cover-Air Cleaner           445         491588s         Filter-Air Cleaner Cartridge         968         692298         Cover-Air Cleaner           445         491588s         Filter-Air Cleaner Cartridge         968         692298         Cover-Air Cleaner           456         692299         Plate-Pawl Friction         969         690700         Screw (Blower Cover)           505         691251         Nut (Gov. Control Lever)         975         493640         Bowl-Float           510 </td <td></td> <td></td> <td></td> <td></td> <td>റാ</td> <td>1</td> <td></td> <td></td> <td></td>					റാ	1			
365         692524         Screw (Carburetor)         923         691994         Brake           383         89838s         Wrench-Spark Plug         935         499421         Switch-Interlock           404         690272         Washer (Governor Crank)         937         691325         Spline-Starter           425         690670         Screw (Air Cleaner Base)         966         792040         Base-Air Cleaner Primer           445         491588s         Filter-Air Cleaner Cartridge         968         692298         Cover-Air Cleaner           456         692299         Plate-Pawl Friction         969         690700         Screw (Blower Cover)           459         281505s         Pawl-Ratchet         972         699374         Tank-Fuel           505         691251         Nut (Gov. Control Lever)         975         493640         Bowl-Float           510         494147         Drive-Starter         976         496115         Primer-Carburetor           513         692358         Clutch-Drive         977         498261         Set-Carburetor Gasket           524         692296         Seal-Dipstick         1036         792156         Label-Emissions           525         495265         Tube-Dipst									
383         89838s         Wrench-Spark Plug         935         499421         Switch-Interlock           404         690272         Washer (Governor Crank)         937         691325         Spline-Starter           425         690670         Screw (Air Cleaner Cover)         957         6999885         Cap-Fuel Tank           443         692523         Screw (Air Cleaner Base)         966         792040         Base-Air Cleaner Primer           445         491588s         Filter-Air Cleaner Cartridge         968         692298         Cover-Air Cleaner           456         692299         Plate-Pawl Friction         969         690700         Screw (Blower Cover)           459         281505s         Nut (Gov. Control Lever)         975         493640         Bowl-Float           505         691251         Nut (Gov. Control Lever)         975         493640         Bowl-Float           510         494147         Drive-Starter         976         49615         Primer-Carburetor           513         692358         Clutch-Drive         977         498261         Set-Carburetor Gasket           523         499621         Dipstick         1036         792156         Label-Emissions           524         692296									
404         690272         Washer (Governor Crank)         937         691325         Spline-Starter           425         690670         Screw (Air Cleaner Cover)         957         699985         Cap-Fuel Tank           443         692523         Screw (Air Cleaner Base)         966         792040         Base-Air Cleaner Primer           456         491588s         Filter-Air Cleaner Cartridge         968         692298         Cover-Air Cleaner           456         692299         Plate-Pawl Friction         969         690700         Screw (Blower Cover)           459         281505s         Pawl-Ratchet         972         699374         Tank-Fuel           505         691251         Nut (Gov. Control Lever)         975         493640         Bowl-Float           510         494147         Drive-Starter         976         496115         Primer-Carburetor           513         692358         Clutch-Drive         977         498261         Set-Carburetor Gasket           523         499621         Dipstick         1036         792156         Label-Emissions           524         692296         Seal-Dipstick Tube         1059         692311         Kit-Screw/Washer           525         495265 <t< td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></t<>									
425         690670         Screw (Air Cleaner Cover)         957         699985         Cap-Fuel Tank           443         692523         Screw (Air Cleaner Base)         966         792040         Base-Air Cleaner Primer           445         491588s         Filter-Air Cleaner Cartridge         968         692298         Cover-Air Cleaner           456         692299         Plate-Pawl Friction         969         690700         Screw (Blower Cover)           459         281505s         Pawl-Ratchet         972         699374         Tank-Fuel           505         691251         Nut (Gov. Control Lever)         975         493640         Bowl-Float           510         494147         Drive-Starter         976         496115         Primer-Carburetor           513         692358         Clutch-Drive         977         498261         Set-Carburetor Gasket           523         499621         Dipstick         1036         792156         Label-Emissions           524         692296         Seal-Dipstick Tube         1059         692311         Kit-Screw/Washer           525         495265         Tube-Dipstick         1160         691627         Screw (Interlock Switch)           529         691193         <									
443         692523         Screw (Air Cleaner Base)         966         792040         Base-Air Cleaner Primer           445         491588s         Filter-Air Cleaner Cartridge         968         692298         Cover-Air Cleaner           456         692299         Plate-Pawl Friction         969         690700         Screw (Blower Cover)           459         281505s         Pawl-Ratchet         972         699374         Tank-Fuel           505         691251         Nut (Gov. Control Lever)         975         493640         Bowl-Float           510         494147         Drive-Starter         976         496115         Primer-Carburetor           513         692358         Clutch-Drive         977         498261         Set-Carburetor Gasket           523         499621         Dipstick         1036         792156         Label-Emissions           524         692296         Seal-Dipstick         1059         692311         Kit-Screw/Washer           525         495265         Tube-Dipstick         1160         691627         Screw (Interlock Switch)           529         69123         Grommet         1210         498144         Pulley/Spring Assy. (Pulley)           544         692786         Armat									
445         491588s         Filter-Air Cleaner Cartridge         968         692298         Cover-Air Cleaner           456         692299         Plate-Pawl Friction         969         690700         Screw (Blower Cover)           459         281505s         Pawl-Ratchet         972         699374         Tank-Fuel           505         691251         Nut (Gov. Control Lever)         975         493640         Bowl-Float           510         494147         Drive-Starter         976         496115         Primer-Carburetor           513         692358         Clutch-Drive         977         498261         Set-Carburetor Gasket           523         499621         Dipstick         1036         792156         Label-Emissions           524         692296         Seal-Dipstick Tube         1059         692311         Kit-Screw/Washer           525         495265         Tube-Dipstick         1160         691627         Screw (Interlock Switch)           529         69123         Grommet         1210         498144         Pulley/Spring Assy. (Pulley)           544         692199         Washer Set         1329         125K07-0060         Replacement Engine           562         691119         Bolt (Gov. Co									
456         692299         Plate-Pawl Friction         969         690700         Screw (Blower Cover)           459         281505s         Pawl-Ratchet         972         699374         Tank-Fuel           505         691251         Nut (Gov. Control Lever)         975         493640         Bowl-Float           510         494147         Drive-Starter         976         496115         Primer-Carburetor           513         692358         Clutch-Drive         977         498261         Set-Carburetor Gasket           523         499621         Dipstick         1036         792156         Label-Emissions           524         692296         Seal-Dipstick Tube         1059         692311         Kit-Screw/Washer           525         495265         Tube-Dipstick         1160         691627         Screw (Interlock Switch)           529         691923         Grommet         1210         498144         Pulley/Spring Assy. (Pulley)           544         690786         Armature-Starter         1211         498144         Pulley/Spring Assy. (Spring)           545         492919         Bolt (Gov. Control Lever)         Screw (Control Cover)         and add 691450           584         691879         Gasket-Breathe									
459         281505s         Pawl-Ratchet         972         699374         Tank-Fuel           505         691251         Nut (Gov. Control Lever)         975         493640         Bowl-Float           510         494147         Drive-Starter         976         496115         Primer-Carburetor           513         692358         Clutch-Drive         977         498261         Set-Carburetor Gasket           523         499621         Dipstick         1036         792156         Label-Emissions           524         692296         • Seal-Dipstick Tube         1059         692311         Kit-Screw/Washer           525         495265         Tube-Dipstick         1160         691627         Screw (Interlock Switch)           529         691923         Grommet         1210         498144         Pulley/Spring Assy. (Pulley)           544         690786         Armature-Starter         1211         498144         Pulley/Spring Assy. (Spring)           545         492919         Washer Set         1329         125K07-0060         Replacement Engine           564         698589         Screw (Control Cover)         and add 691450           584         691774         Gasket-Breather Passage         - 398067				<del>-</del>					
505         691251         Nut (Gov. Control Lever)         975         493640         Bowl-Float           510         494147         Drive-Starter         976         496115         Primer-Carburetor           513         692358         Clutch-Drive         977         498261         Set-Carburetor Gasket           523         499621         Dipstick         1036         792156         Label-Emissions           524         692296         Seal-Dipstick Tube         1059         692311         Kit-Screw/Washer           525         495265         Tube-Dipstick         1160         691627         Screw (Interlock Switch)           529         691923         Grommet         1210         498144         Pulley/Spring Assy. (Pulley)           544         690786         Armature-Starter         1211         498144         Pulley/Spring Assy. (Spring)           545         492919         Washer Set         1329         125K07-0060         Replacement Engine           562         691119         Bolt (Gov. Control Lever)         329         125K07-0060         Repair Manual           584         697734         Cover-Breather Passage         1330         270962         Repair Manual           592         690800									,
510         494147         Drive-Starter         976         496115         Primer-Carburetor           513         692358         Clutch-Drive         977         498261         Set-Carburetor Gasket           523         499621         Dipstick         1036         792156         Label-Emissions           524         692296         Seal-Dipstick Tube         1059         692311         Kit-Screw/Washer           525         495265         Tube-Dipstick         1160         691627         Screw (Interlock Switch)           529         691923         Grommet         1210         498144         Pulley/Spring Assy. (Pulley)           544         690786         Armature-Starter         1211         498144         Pulley/Spring Assy. (Spring)           545         492919         Washer Set         1329         125K07-0060         Replacement Engine           562         691119         Bolt (Gov. Control Lever)         (remove 691450         and add 691450           584         6987734         Cover-Breather Passage         1330         270962         Repair Manual           585         691879         Gasket-Breather Passage         - 398067         Spark Arrester           592         690800         Nut (Rewind Starter)		691251		Nut (Gov. Control Lever)					
513         692358         Clutch-Drive         977         498261         Set-Carburetor Gasket           523         499621         Dipstick         1036         792156         Label-Emissions           524         692296         • Seal-Dipstick Tube         1059         692311         Kit-Screw/Washer           525         495265         Tube-Dipstick         1160         691627         Screw (Interlock Switch)           529         691923         Grommet         1210         498144         Pulley/Spring Assy. (Pulley)           544         690786         Armature-Starter         1211         498144         Pulley/Spring Assy. (Spring)           545         492919         Washer Set         1329         125K07-0060         Replacement Engine           562         691119         Bolt (Gov. Control Lever)         (remove 691450         and add 691450)           584         697734         Cover-Breather Passage         1330         270962         Repair Manual           585         691879         Gasket-Breather Passage          398067         Spark Arrester           592         690800         Sterw (Pawl Friction Plate)         (available accessory)           601         791850         Clamp-Hose         Includ									
524         692296         Seal-Dipstick Tube         1059         692311         Kit-Screw/Washer           525         495265         Tube-Dipstick         1160         691627         Screw (Interlock Switch)           529         691923         Grommet         1210         498144         Pulley/Spring Assy. (Pulley)           544         690786         Armature-Starter         1211         498144         Pulley/Spring Assy. (Spring)           545         492919         Washer Set         1329         125K07-0060         Replacement Engine           562         691119         Bolt (Gov. Control Lever)         (remove 691450         and add 691450)           564         698589         Screw (Control Cover)         398067         Repair Manual           585         691879         Gasket-Breather Passage         398067         Spark Arrester           592         690800         Nut (Rewind Starter)         (available accessory)           597         691696         Screw (Pawl Friction Plate)         - Included in Engine Gasket Set, Key No. 358           604         698588         Cover-Control         Ø Included in Carb. Overhaul Kit, Key No. 121           613         691340         Screw (Muffler)         † Included in Carb. Gasket Set, Key No. 977	513	692358		Clutch-Drive	97	7	498261		Set-Carburetor Gasket
525         495265         Tube-Dipstick         1160 691627         Screw (Interlock Switch)           529         691923         Grommet         1210 498144         Pulley/Spring Assy. (Pulley)           544         690786         Armature-Starter         1211 498144         Pulley/Spring Assy. (Spring)           545         492919         Washer Set         1329 125K07-0060         Replacement Engine           562         691119         Bolt (Gov. Control Lever)         (remove 691450           564         698589         Screw (Control Cover)         and add 691450)           584         697734         Cover-Breather Passage         1330 270962         Repair Manual           585         691879         Gasket-Breather Passage         - 398067         Spark Arrester           592         690800         Nut (Rewind Starter)         (available accessory)           597         691696         Screw (Pawl Friction Plate)           601         791850         Clamp-Hose         • Included in Engine Gasket Set, Key No. 358           604         698588         Cover-Control         Ø Included in Carb. Overhaul Kit, Key No. 121           613         691340         Screw (Muffler)         ‡ Included in Carb. Gasket Set, Key No. 977           616         698801	523	499621		Dipstick	10	36	792156		Label-Emissions
529         691923         Grommet         1210 498144         Pulley/Spring Assy. (Pulley)           544         690786         Armature-Starter         1211 498144         Pulley/Spring Assy. (Spring)           545         492919         Washer Set         1329 125K07-0060         Replacement Engine           562         691119         Bolt (Gov. Control Lever)         (remove 691450           564         698589         Screw (Control Cover)         and add 691450)           584         697734         Cover-Breather Passage         1330 270962         Repair Manual           585         691879         Gasket-Breather Passage         - 398067         Spark Arrester           597         691696         Screw (Pawl Friction Plate)         (available accessory)           597         691696         Clamp-Hose         Included in Engine Gasket Set, Key No. 358           604         698588         Cover-Control           608         497680         Starter-Rewind         Ø Included in Carb. Overhaul Kit, Key No. 121           615         690340         Retainer-Governor Shaft         ‡ Included in Carb. Gasket Set, Key No. 977           616         698801         Crank-Governor	524	692296	•	Seal-Dipstick Tube	10	59	692311		Kit-Screw/Washer
544         690786         Armature-Starter         1211         498144         Pulley/Spring Assy. (Spring)           545         492919         Washer Set         1329         125K07-0060         Replacement Engine           562         691119         Bolt (Gov. Control Lever)         (remove 691450           564         698589         Screw (Control Cover)         and add 691450)           584         697734         Cover-Breather Passage         1330         270962         Repair Manual           585         691879         Gasket-Breather Passage         - 398067         Spark Arrester           592         690800         Nut (Rewind Starter)         (available accessory)           597         691696         Screw (Pawl Friction Plate)           601         791850         Clamp-Hose         • Included in Engine Gasket Set, Key No. 358           604         698588         Cover-Control           608         497680         Starter-Rewind         Ø Included in Carb. Overhaul Kit, Key No. 121           613         691340         Retainer-Governor Shaft         ‡ Included in Carb. Gasket Set, Key No. 977           616         698801         Crank-Governor	525	495265		Tube-Dipstick	11	60	691627		Screw (Interlock Switch)
545         492919         Washer Set         1329         125K07-0060         Replacement Engine           562         691119         Bolt (Gov. Control Lever)         (remove 691450           564         698589         Screw (Control Cover)         and add 691450)           584         697734         Cover-Breather Passage         1330         270962         Repair Manual           585         691879         Gasket-Breather Passage         - 398067         Spark Arrester           592         690800         Nut (Rewind Starter)         (available accessory)           597         691696         Screw (Pawl Friction Plate)           601         791850         Clamp-Hose         • Included in Engine Gasket Set, Key No. 358           604         698588         Cover-Control         Ø Included in Carb. Overhaul Kit, Key No. 121           613         691340         Screw (Muffler)         ‡ Included in Carb. Gasket Set, Key No. 977           616         698801         Crank-Governor         ‡ Included in Carb. Gasket Set, Key No. 977				Grommet					Pulley/Spring Assy. (Pulley)
562         691119         Bolt (Gov. Control Lever)         (remove 691450           564         698589         Screw (Control Cover)         and add 691450           584         697734         Cover-Breather Passage         1330 270962         Repair Manual           585         691879         Gasket-Breather Passage         - 398067         Spark Arrester           592         690800         Nut (Rewind Starter)         (available accessory)           597         691696         Screw (Pawl Friction Plate)           601         791850         Clamp-Hose         Included in Engine Gasket Set, Key No. 358           604         698588         Cover-Control         Ø Included in Carb. Overhaul Kit, Key No. 121           613         691340         Screw (Muffler)         ‡ Included in Carb. Gasket Set, Key No. 977           616         698801         Crank-Governor         ‡ Included in Carb. Gasket Set, Key No. 977				Armature-Starter					
564         698589         Screw (Control Cover)         and add 691450)           584         697734         Cover-Breather Passage         1330 270962         Repair Manual           585         691879         Gasket-Breather Passage         - 398067         Spark Arrester           592         690800         Nut (Rewind Starter)         (available accessory)           597         691696         Screw (Pawl Friction Plate)           601         791850         Clamp-Hose         Included in Engine Gasket Set, Key No. 358           604         698588         Cover-Control         Ø Included in Carb. Overhaul Kit, Key No. 121           613         691340         Screw (Muffler)         ‡ Included in Carb. Gasket Set, Key No. 977           616         698801         Crank-Governor         ‡ Included in Carb. Gasket Set, Key No. 977					13	29	125K07-	0060	
584         697734         Cover-Breather Passage         1330         270962         Repair Manual           585         691879         • Gasket-Breather Passage         - 398067         Spark Arrester           592         690800         Nut (Rewind Starter)         (available accessory)           597         691696         Screw (Pawl Friction Plate)           601         791850         Clamp-Hose         • Included in Engine Gasket Set, Key No. 358           604         698588         Cover-Control         Ø Included in Carb. Overhaul Kit, Key No. 121           613         691340         Screw (Muffler)         Ø Included in Carb. Gasket Set, Key No. 977           616         698801         Crank-Governor         ‡ Included in Carb. Gasket Set, Key No. 977									•
585         691879         • Gasket-Breather Passage         398067         Spark Arrester           592         690800         Nut (Rewind Starter)         (available accessory)           597         691696         Screw (Pawl Friction Plate)           601         791850         Clamp-Hose         • Included in Engine Gasket Set, Key No. 358           604         698588         Cover-Control         Ø Included in Carb. Overhaul Kit, Key No. 121           613         691340         Screw (Muffler)         Ø Included in Carb. Gasket Set, Key No. 977           616         698801         Crank-Governor         ‡ Included in Carb. Gasket Set, Key No. 977									
592         690800         Nut (Rewind Starter)         (available accessory)           597         691696         Screw (Pawl Friction Plate)           601         791850         Clamp-Hose         • Included in Engine Gasket Set, Key No. 358           604         698588         Cover-Control         Ø Included in Carb. Overhaul Kit, Key No. 121           613         691340         Screw (Muffler)         Ø Included in Carb. Gasket Set, Key No. 977           616         698801         Crank-Governor         ‡ Included in Carb. Gasket Set, Key No. 977					13	30			
597         691696         Screw (Pawl Friction Plate)           601         791850         Clamp-Hose         • Included in Engine Gasket Set, Key No. 358           604         698588         Cover-Control         Ø Included in Carb. Overhaul Kit, Key No. 121           613         691340         Screw (Muffler)         Ø Included in Carb. Gasket Set, Key No. 977           616         698801         Crank-Governor         ‡ Included in Carb. Gasket Set, Key No. 977			•		-	-	398067		
601         791850         Clamp-Hose         • Included in Engine Gasket Set, Key No. 358           604         698588         Cover-Control         Ø Included in Carb. Overhaul Kit, Key No. 121           608         497680         Starter-Rewind         Ø Included in Carb. Overhaul Kit, Key No. 121           613         691340         Screw (Muffler)         ‡ Included in Carb. Gasket Set, Key No. 977           616         698801         Crank-Governor         ‡ Included in Carb. Gasket Set, Key No. 977									(available accessory)
604         698588         Cover-Control           608         497680         Starter-Rewind         Ø Included in Carb. Overhaul Kit, Key No. 121           613         691340         Screw (Muffler)           615         690340         Retainer-Governor Shaft         ‡ Included in Carb. Gasket Set, Key No. 977           616         698801         Crank-Governor				•				_	
608497680Starter-RewindØ Included in Carb. Overhaul Kit, Key No. 121613691340Screw (Muffler)615690340Retainer-Governor Shaft‡ Included in Carb. Gasket Set, Key No. 977616698801Crank-Governor					•	In	cluded in	Eng	ine Gasket Set, Key No. 358
613 691340 Screw (Muffler) 615 690340 Retainer-Governor Shaft ‡ Included in Carb. Gasket Set, Key No. 977 616 698801 Crank-Governor					~		alorata III	<u> </u>	- O
615 690340 Retainer-Governor Shaft ‡ Included in Carb. Gasket Set, Key No. 977 616 698801 Crank-Governor					Ø	ını	ciuded in	Carl	o. Overnaul Kit, Key No. 121
616 698801 Crank-Governor					_	1	ماييمام ما ابد	C ~ ~1	Gooket Set Key No 077
					Ŧ	ını	uuded In	Carl	D. Gasket Set, Ney No. 977
OLI ZIOS445 104 Seal Ulitake Maniiolo) NOTE, Ali Component dimensions diven in U.S.			•\(\alpha\)		NI/	\Tr	E. All com	.no=	ent dimensions given in LLC
604 600040 Switch Ctan inches 1 inches 25 4 mm			+m+	,		) I C		•	<del>_</del>
45 Inches. 1 Inch = 25.4 mm	UZ 1	002010		Ownton Otop	45		11101103.		1 111011 - 25.4 111111

### **SERVICE NOTES**

## **SERVICE NOTES**

# Get it fixed, at your home or ours!

### **Your Home**

For repair – in your home – of all major brand appliances, lawn and garden equipment, or heating and cooling systems, no matter who made it, no matter who sold it!

For the replacement parts, accessories and owner's manuals that you need to do-it-yourself.

For Sears professional installation of home appliances and items like garage door openers and water heaters.

**1-800-4-MY-HOME**® (1-800-469-4663)

www.sears.com

Anytime, day or night (U.S.A. and Canada) www.sears.ca

#### **Our Home**

For repair of carry-in products like vacuums, lawn equipment, and electronics, call or go on-line for the nearest

Sears Parts and Repair Center.

**1-800-488-1222** Anytime, day or night (U.S.A. only)

www.sears.com

To purchase a protection agreement (U.S.A.) or maintenance agreement (Canada) on a product serviced by Sears:

**1-800-827-6655** (U.S.A.)

**1-800-361-6665** (Canada)

Para pedir servicio de reparación a domicilio, y para ordenar piezas:

1-888-SU-HOGAR®

(1-888-784-6427)

Au Canada pour service en français:

1-800-LE-FOYER<sup>MC</sup>

(1-800-533-6937) www.sears.ca



<sup>©</sup> Sears Brands, LLC

<sup>®</sup> Registered Trademark / TM Trademark / SM Service Mark of Sears Brands, LLC

<sup>®</sup> Marca Registrada / TM Marca de Fábrica / SM Marca de Servicio de Sears Brands, LLC

MC Marque de commerce / MD Marque déposée de Sears Brands, LLC